

OpenManage Network Manager 6.2

Supported device drivers and operating systems

Dell Networking Device Driver Report

Supported OS Versions

Description	About Box Display
1.0.0.x	1.0.0.x
1.0.1.x	1.0.1.x
1.0.2.x	1.0.2.x
1.0.4.x	1.0.4.x
1.1.0.x	1.1.0.x
1.2.0.x	1.2.0.x
1.2.1.x	1.2.1.x
2.0.0.x	2.0.0.x
3.1.0.x	3.1.0.x
3.2.x	3.2.x
3.3.x	3.3.x
4.0.x	4.0.x
4.1.x	4.1.x
5.1.x	5.1.x
5.2.5.x	5.2.5.x
6.0.7.x	6.0.7.x
6.1.x	6.1.x
6.2.x	6.2.x
6.2.6.x	6.2.6.x

Supported Device Models

Driver	OS	Model	SysObjectId	Type
dellpowerconnect	Dell Networking (PCT)	3024	1.3.6.14.1.674.10895.1	Switch
dellpowerconnect	Dell Networking (PCT)	3048	1.3.6.14.1.674.10895.5	Switch
dellpowerconnect	Dell Networking (PCT)	3248	1.3.6.14.1.674.10895.3	Switch
dellpowerconnect	Dell Networking (PCT)	3324	1.3.6.14.1.674.10895.3002	Switch

dellpowerconnect	Dell Networking (PCT)	3348	1.3.6.1.4.1.674.10895.3003	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N1524	1.3.6.1.4.1.674.10895.3063	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N1524P	1.3.6.1.4.1.674.10895.3064	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N1548	1.3.6.1.4.1.674.10895.3065	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N1548P	1.3.6.1.4.1.674.10895.3066	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N2024	1.3.6.1.4.1.674.10895.3053	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N2024P	1.3.6.1.4.1.674.10895.3055	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N2048	1.3.6.1.4.1.674.10895.3054	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N2048P	1.3.6.1.4.1.674.10895.3056	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N3024	1.3.6.1.4.1.674.10895.3057	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N3024F	1.3.6.1.4.1.674.10895.3061	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N3024P	1.3.6.1.4.1.674.10895.3059	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N3048	1.3.6.1.4.1.674.10895.3058	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N3048P	1.3.6.1.4.1.674.10895.3060	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N4032/ PowerConnect 8132	1.3.6.1.4.1.674.10895.3042	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N4032F/ PowerConnect 8132F	1.3.6.1.4.1.674.10895.3044	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N4064/ PowerConnect 8164	1.3.6.1.4.1.674.10895.3045	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking N4064F/ PowerConnect 8164F	1.3.6.1.4.1.674.10895.3046	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking X1008	1.3.6.1.4.1.674.10895.3067	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking X1008P	1.3.6.1.4.1.674.10895.3068	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking X1018	1.3.6.1.4.1.674.10895.3069	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking X1018P	1.3.6.1.4.1.674.10895.3070	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking X1026	1.3.6.1.4.1.674.10895.3071	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking X1026P	1.3.6.1.4.1.674.10895.3072	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking X1052	1.3.6.1.4.1.674.10895.3073	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking X1052P	1.3.6.1.4.1.674.10895.3074	Switch
dellpowerconnect	Dell Networking (PCT)	Dell Networking X4012	1.3.6.1.4.1.674.10895.3075	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 3424	1.3.6.1.4.1.674.10895.3006	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 3424P	1.3.6.1.4.1.674.10895.3008	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 3448	1.3.6.1.4.1.674.10895.3007	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 3448P	1.3.6.1.4.1.674.10895.3009	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 3524	1.3.6.1.4.1.674.10895.3016	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 3524P	1.3.6.1.4.1.674.10895.3018	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 3548	1.3.6.1.4.1.674.10895.3017	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 3548P	1.3.6.1.4.1.674.10895.3019	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 5012	1.3.6.1.4.1.674.10895.2	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 5212	1.3.6.1.4.1.674.10895.1000	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 5224	1.3.6.1.4.1.674.10895.4	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 5316	1.3.6.1.4.1.674.10895.3005	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 5324	1.3.6.1.4.1.674.10895.3004	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 5424	1.3.6.1.4.1.674.10895.3020	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 5448	1.3.6.1.4.1.674.10895.3021	Switch

dellpowerconnect	Dell Networking (PCT)	PowerConnect 5524	1.3.6.14.1.674.10895.3030	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 5548	1.3.6.14.1.674.10895.3031	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 5548P	1.3.6.14.1.674.10895.3033	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 6224	1.3.6.14.1.674.10895.3010	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 6224F	1.3.6.14.1.674.10895.3014	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 6224P	1.3.6.14.1.674.10895.3012	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 6248	1.3.6.14.1.674.10895.3011	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 6248P	1.3.6.14.1.674.10895.3013	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 7024	1.3.6.14.1.674.10895.3034	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 7024F	1.3.6.14.1.674.10895.3038	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 7024P	1.3.6.14.1.674.10895.3036	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 7048	1.3.6.14.1.674.10895.3035	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 7048P	1.3.6.14.1.674.10895.3037	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 7048R	1.3.6.14.1.674.10895.3039	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 7048RA	1.3.6.14.1.674.10895.3040	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 8024	1.3.6.14.1.674.10895.3023	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 8024F	1.3.6.14.1.674.10895.3024	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect M6220	1.3.6.14.1.674.10895.3015	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect M6348	1.3.6.14.1.674.10895.3025	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect M8024	1.3.6.14.1.674.10895.3022	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect M8024-k	1.3.6.14.1.674.10895.3041	Switch
dellpowerconnect	Dell Networking (PCT)	PowerConnect 5524P	1.3.6.14.1.674.10895.3032	Switch
dellpowerconnect	Dell Networking (PCT)	Dell PowerEdge VRTX 1Gb IOM	1.3.6.14.1.674.10895.3052	Switch
dellpowerconnect	Dell Networking (PCT)	Dell PowerEdge VRTX 10Gb	1.3.6.14.1.674.10895.3062	Switch

Dell Networking (Dell Networking OS) Report

Supported OS Versions

Description	About Box Display
Dell Networking OS 8.3.x	8.3.x
Dell Networking OS 8.4.x	8.4.x
E8.4..7.0(for Dell Networking C Series)	E8.4.7.0
Dell Networking OS 9.1.x	9.1.x
Dell Networking OS 9.3.x	9.3.x
Dell Networking OS 9.4.x	9.4.x
Dell Networking OS 9.5.x	9.5.x
Dell Networking OS 9.6.x	9.6.x
Dell Networking OS 9.7.x	9.7.x
Dell Networking OS 9.8.x	9.8.x
Dell Networking OS 9.9.x	9.9.x

Dell Device Driver	Dell Networking OS	Model	SysObjectId	Type
force10	Dell Networking (FTOS)	Dell Networking C7004/C150	1.3.6.14.1.6027.1.2.2	Switch
force10	Dell Networking (FTOS)	Dell Networking C7008/C300	1.3.6.14.1.6027.1.2.1	Switch
force10	Dell Networking (FTOS)	Dell Networking C9010	1.3.6.14.1.6027.1.2.3	Switch
force10	Dell Networking (FTOS)	Dell Networking E1200	1.3.6.14.1.6027.1.1.1	Switch
dellpowerconnect	Dell Networking (PCT)	3348	1.3.6.14.1.674.10895.3003	Switch
force10	Dell Networking (FTOS)	Dell Networking E1200i	1.3.6.14.1.6027.1.1.5	Switch
force10	Dell Networking (FTOS)	Dell Networking E300	1.3.6.14.1.6027.1.1.3	Switch
force10	Dell Networking (FTOS)	Dell Networking E600	1.3.6.14.1.6027.1.1.2	Switch
force10	Dell Networking (FTOS)	Dell Networking E600i	1.3.6.14.1.6027.1.1.4	Switch
force10	Dell Networking (FTOS)	Dell Networking MXL10	1.3.6.14.1.6027.1.4.1	Converged EthernetSwitch
force10	Dell Networking (FTOS)	Dell Networking S2410CP	1.3.6.14.1.6027.1.3.5	Switch
force10	Dell Networking (FTOS)	Dell Networking S2410P	1.3.6.14.1.6027.1.3.6	Switch
force10	Dell Networking (FTOS)	Dell Networking S25N	1.3.6.14.1.6027.1.3.11	Switch
force10	Dell Networking (FTOS)	Dell Networking S25P-AC	1.3.6.14.1.6027.1.3.4	Switch
force10	Dell Networking (FTOS)	Dell Networking S25P-DC	1.3.6.14.1.6027.1.3.9	Switch
force10	Dell Networking (FTOS)	Dell Networking S25V	1.3.6.14.1.6027.1.3.10	Switch
force10	Dell Networking (FTOS)	Dell Networking S3048-ON	1.3.6.14.1.6027.1.3.23	Switch
force10	Dell Networking (FTOS)	Dell Networking S3124	1.3.6.14.1.6027.1.3.27	Switch
force10	Dell Networking (FTOS)	Dell Networking S3124F	1.3.6.14.1.6027.1.3.26	Switch
force10	Dell Networking (FTOS)	Dell Networking S3124P	1.3.6.14.1.6027.1.3.25	Switch

force10	Dell Networking (FTOS)	Dell Networking S3148P	1.3.6.1.4.1.6027.1.3.24	Switch
force10	Dell Networking (FTOS)	Dell Networking S4048-ON	1.3.6.1.4.1.6027.1.3.20	Switch
force10	Dell Networking (FTOS)	Dell Networking S4810	1.3.6.1.4.1.6027.1.3.14	Switch
force10	Dell Networking (FTOS)	Dell Networking S4820T	1.3.6.1.4.1.6027.1.3.17	Switch
force10	Dell Networking (FTOS)	Dell Networking S50	1.3.6.1.4.1.6027.1.3.1	Switch
force10	Dell Networking (FTOS)	Dell Networking S5000	1.3.6.1.4.1.6027.1.3.19	Converged EthernetSwitch
force10	Dell Networking (FTOS)	Dell Networking S50E	1.3.6.1.4.1.6027.1.3.2	Switch
force10	Dell Networking (FTOS)	Dell Networking S50N	1.3.6.1.4.1.6027.1.3.8	Switch
force10	Dell Networking (FTOS)	Dell Networking S50N-AC	1.3.6.1.4.1.6027.1.3.7	Switch
force10	Dell Networking (FTOS)	Dell Networking S50V	1.3.6.1.4.1.6027.1.3.3	Switch
force10	Dell Networking (FTOS)	Dell Networking S55	1.3.6.1.4.1.6027.1.3.13	Switch
force10	Dell Networking (FTOS)	Dell Networking S60	1.3.6.1.4.1.6027.1.3.12	Switch
force10	Dell Networking (FTOS)	Dell Networking S6000	1.3.6.1.4.1.6027.1.3.18	Switch
force10	Dell Networking (FTOS)	Dell Networking S6000-ON	1.3.6.1.4.1.6027.1.3.22	Switch
force10	Dell Networking (FTOS)	Dell Networking Z9000	1.3.6.1.4.1.6027.1.3.16	Switch
force10	Dell Networking (FTOS)	Dell Networking Z9000	1.3.6.1.4.1.6027.1.3.15	Switch
force10	Dell Networking (FTOS)	Dell Networking Z9100-ON	1.3.6.1.4.1.6027.1.5.2	Switch
force10	Dell Networking (FTOS)	Dell Networking Z9500	1.3.6.1.4.1.6027.1.5.1	Switch
force10	Dell Networking (FTOS)	Dell PowerEdge FN IOA	1.3.6.1.4.1.6027.1.4.3	Switch
force10	Dell Networking (FTOS)	Dell PowerEdge M I/O Aggregator	1.3.6.1.4.1.6027.1.4.2	Converged EthernetSwitch

Dell SonicWall Device Driver Report

Supported OS Versions

Description	About Box Display
5.8.x	5.8.x
5.9.x	5.9.x
6.1.x	6.1.x

Supported Device Models

Driver	OS	Model	SysObjectId	Type
sonicwall	SonicOS	Generic SonicWALL	1.3.6.1.4.1.8741.1_GENERIC	Firewall
sonicwall	SonicOS	Generic SonicWALL SRA	1.3.6.1.4.1.8741.6_GENERIC	Firewall
sonicwall	SonicOS	SonicWALL NSA 220	1.3.6.1.4.1.8741.1_NSA_220	Firewall
sonicwall	SonicOS	SonicWALL NSA 220 Wireless	1.3.6.1.4.1.8741.1_NSA_220W	Firewall
sonicwall	SonicOS	SonicWALL NSA 240	1.3.6.1.4.1.8741.1_NSA_240	Firewall
sonicwall	SonicOS	SonicWALL NSA 2400	1.3.6.1.4.1.8741.1_NSA_2400	Firewall
sonicwall	SonicOS	SonicWALL NSA 250M	1.3.6.1.4.1.8741.1_NSA_250M	Firewall
sonicwall	SonicOS	SonicWALL NSA 250M Wireless	1.3.6.1.4.1.8741.1_NSA_250M_WIRELESS	Firewall
sonicwall	SonicOS	SonicWALL NSA 2600	1.3.6.1.4.1.8741.1_NSA_2600	Firewall
sonicwall	SonicOS	SonicWALL NSA 3500	1.3.6.1.4.1.8741.1_NSA_3500	Firewall
sonicwall	SonicOS	SonicWALL NSA 3600	1.3.6.1.4.1.8741.1_NSA_3600	Firewall
sonicwall	SonicOS	SonicWALL NSA 4500	1.3.6.1.4.1.8741.1_NSA_4500	Firewall
sonicwall	SonicOS	SonicWALL NSA 4600	1.3.6.1.4.1.8741.1_NSA_4600	Firewall
sonicwall	SonicOS	SonicWALL NSA 5600	1.3.6.1.4.1.8741.1_NSA_5600	Firewall
sonicwall	SonicOS	SonicWALL NSA 6600	1.3.6.1.4.1.8741.1_NSA_6600	Firewall
sonicwall	SonicOS	SonicWALL NSA E5500	1.3.6.1.4.1.8741.1_NSA_E5500	Firewall
sonicwall	SonicOS	SonicWALL NSA E6500	1.3.6.1.4.1.8741.1_E6500	Firewall
sonicwall	SonicOS	SonicWALL NSA E7500	1.3.6.1.4.1.8741.1_E7500	Firewall
sonicwall	SonicOS	SonicWALL NSA E8500	1.3.6.1.4.1.8741.1_E8500	Firewall
sonicwall	SonicOS	SonicWALL NSA E8510	1.3.6.1.4.1.8741.1_E8510	Firewall
sonicwall	SonicOS	SonicWALL PRO 1260	1.3.6.1.4.1.8741.1_PRO_1260	Firewall
sonicwall	SonicOS	SonicWALL SRA 1200	1.3.6.1.4.1.8741.6_SRA_1200	Firewall
sonicwall	SonicOS	SonicWALL SRA 1600	1.3.6.1.4.1.8741.6_SRA_1600	Firewall
sonicwall	SonicOS	SonicWALL SRA 4600	1.3.6.1.4.1.8741.6_SRA_4600	Firewall
sonicwall	SonicOS	SonicWALL SuperMassive 10200	1.3.6.1.4.1.8741.1_E10200	Firewall
sonicwall	SonicOS	SonicWALL SuperMassive 10400	1.3.6.1.4.1.8741.1_E10400	Firewall
sonicwall	SonicOS	SonicWALL SuperMassive 10800	1.3.6.1.4.1.8741.1_E10800	Firewall
sonicwall	SonicOS	SonicWALL SuperMassive 9200	1.3.6.1.4.1.8741.1_9200	Firewall
sonicwall	SonicOS	SonicWALL SuperMassive 9400	1.3.6.1.4.1.8741.1_9400	Firewall
sonicwall	SonicOS	SonicWALL SuperMassive 9600	1.3.6.1.4.1.8741.1_9600	Firewall
sonicwall	SonicOS	SonicWALL SuperMassive 9800	1.3.6.1.4.1.8741.1_9800	Firewall
sonicwall	SonicOS	SonicWALL TZ 100	1.3.6.1.4.1.8741.1_TZ100	Firewall

sonicwall	SonicOS	SonicWALL TZ 105	1.3.6.1.4.1.8741.1_TZ105	Firewall
sonicwall	SonicOS	SonicWALL TZ 105 Wireless	1.3.6.1.4.1.8741.1_TZ105_WIRELESS	Firewall
sonicwall	SonicOS	SonicWALL TZ 180	1.3.6.1.4.1.8741.1_TZ180	Firewall
sonicwall	SonicOS	SonicWALL TZ 190	1.3.6.1.4.1.8741.1_TZ190	Firewall
sonicwall	SonicOS	SonicWALL TZ 200 Wireless	1.3.6.1.4.1.8741.1_TZ200_WIRELESS	Firewall
sonicwall	SonicOS	SonicWALL TZ 205	1.3.6.1.4.1.8741.1_TZ205	Firewall
sonicwall	SonicOS	SonicWALL TZ 205 Wireless	1.3.6.1.4.1.8741.1_TZ205_WIRELESS	Firewall
sonicwall	SonicOS	SonicWALL TZ 210	1.3.6.1.4.1.8741.1_TZ210	Firewall
sonicwall	SonicOS	SonicWALL TZ 210 Wireless	1.3.6.1.4.1.8741.1_TZ210_WIRELESS	Firewall
sonicwall	SonicOS	SonicWALL TZ 215	1.3.6.1.4.1.8741.1_TZ215	Firewall
sonicwall	SonicOS	SonicWALL TZ 215 Wireless	1.3.6.1.4.1.8741.1_TZ215_WIRELESS	Firewall
sonicwall	SonicOS	SonicWALL TZ 300	1.3.6.1.4.1.8741.1_TZ300	Firewall
sonicwall	SonicOS	SonicWALL TZ 300 Wireless	1.3.6.1.4.1.8741.1_TZ300_WIRELESS	Firewall
sonicwall	SonicOS	SonicWALL TZ 400	1.3.6.1.4.1.8741.1_TZ400	Firewall
sonicwall	SonicOS	SonicWALL TZ 400 Wireless	1.3.6.1.4.1.8741.1_TZ400_WIRELESS	Firewall
sonicwall	SonicOS	SonicWALL TZ 500	1.3.6.1.4.1.8741.1_TZ500	Firewall
sonicwall	SonicOS	SonicWALL TZ 500 Wireless	1.3.6.1.4.1.8741.1_TZ500_WIRELESS	Firewall
sonicwall	SonicOS	SonicWALL TZ 600	1.3.6.1.4.1.8741.1_TZ600	Firewall
sonicwall	SonicOS	SonicWALL PRO 4060	1.3.6.1.4.1.8741.1_PRO_4060	Firewall
sonicwall	SonicOS	SonicWALL PRO 2040	1.3.6.1.4.1.8741.1_PRO_2040	Firewall
sonicwall	SonicOS	SonicWALL PRO 5060	1.3.6.1.4.1.8741.1_PRO_5060	Firewall
sonicwall	SonicOS	SonicWALL SOHO	1.3.6.1.4.1.8741.1_SOHO	Firewall
sonicwall	SonicOS	SonicWALL SOHO WIRELESS	1.3.6.1.4.1.8741.1_SOHO_WIRELESS	Firewall

Cumulus

Supported Device Models

Driver	OS	Model	SysObjectId	Type
ddcumulus	Cumulus	cumulus	1.3.6.1.4.1.40310	Switch

Supported Device Models

Driver	OS	Model	SysObjectId	Type
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.255	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.15	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.1	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.11	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.9	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.7	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.8	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.3	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.5	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.13	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.12	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.14	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.4	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.6	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.10	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.2	SVR
amigopod	Amigopod	PowerConnect W-ClearPass GuestConnect	1.3.6.14.1.8072.3.2.16	SVR

Supported Device Models

Driver	OS	Model	SysObjectId	Type
arista	AristaEOS	ARISTASIM	1.3.6.14.1.30065.1.2759	Switch
arista	AristaEOS	aristaDCS7048T4S	1.3.6.14.1.30065.1.3011.7048.4274.3282	Switch
arista	AristaEOS	aristaDCS7048TA	1.3.6.14.1.30065.1.3011.7048.427.3648	Switch
arista	AristaEOS	aristaDCS7050Q16	1.3.6.14.1.30065.1.3011.7050.2512.16	Switch
arista	AristaEOS	aristaDCS7050Q16SSD	1.3.6.14.1.30065.1.3011.7050.2512.16.761	Switch
arista	AristaEOS	aristaDCS7050S52	1.3.6.14.1.30065.1.3011.7050.3282.52	Switch
arista	AristaEOS	aristaDCS7050S52SSD	1.3.6.14.1.30065.1.3011.7050.3282.52.761	Switch
arista	AristaEOS	aristaDCS7050S64	1.3.6.14.1.30065.1.3011.7050.3282.64	Switch
arista	AristaEOS	aristaDCS7050S64SSD	1.3.6.14.1.30065.1.3011.7050.3282.64.761	Switch
arista	AristaEOS	aristaDCS7050T36	1.3.6.14.1.30065.1.3011.7050.427.36	Switch
arista	AristaEOS	aristaDCS7050T52	1.3.6.14.1.30065.1.3011.7050.427.52	Switch
arista	AristaEOS	aristaDCS7050T52SSD	1.3.6.14.1.30065.1.3011.7050.427.52.761	Switch
arista	AristaEOS	aristaDCS7050T64	1.3.6.14.1.30065.1.3011.7050.427.64	Switch
arista	AristaEOS	aristaDCS7050T64SSD	1.3.6.14.1.30065.1.3011.7050.427.64.761	Switch
arista	AristaEOS	aristaDCS7120T4S	1.3.6.14.1.30065.1.3011.7120.4274.3282	Switch
arista	AristaEOS	aristaDCS7124FX	1.3.6.14.1.30065.1.3011.7124.2312	Switch
arista	AristaEOS	aristaDCS7124FXCL	1.3.6.14.1.30065.1.3011.7124.2312.2745	Switch
arista	AristaEOS	aristaDCS7124S	1.3.6.14.1.30065.1.3011.7124.3282	Switch
arista	AristaEOS	aristaDCS7124SX	1.3.6.14.1.30065.1.3011.7124.3741	Switch
arista	AristaEOS	aristaDCS7124SXSSD	1.3.6.14.1.30065.1.3011.7124.3741.761	Switch
arista	AristaEOS	aristaDCS7140T8S	1.3.6.14.1.30065.1.3011.7140.427.8.3282	Switch
arista	AristaEOS	aristaDCS7148S	1.3.6.14.1.30065.1.3011.7148.3282	Switch
arista	AristaEOS	aristaDCS7148SX	1.3.6.14.1.30065.1.3011.7148.3741	Switch
arista	AristaEOS	aristaDCS7150S24	1.3.6.14.1.30065.1.3011.7150.3282.24	Switch
arista	AristaEOS	aristaDCS7150S24CL	1.3.6.14.1.30065.1.3011.7150.3282.24.2745	Switch
arista	AristaEOS	aristaDCS7150S24CLSSD	1.3.6.14.1.30065.1.3011.7150.3282.24.2745.761	Switch
arista	AristaEOS	aristaDCS7150S52CL	1.3.6.14.1.30065.1.3011.7150.3282.52.2745	Switch
arista	AristaEOS	aristaDCS7150S52CLSSD	1.3.6.14.1.30065.1.3011.7150.3282.52.2745.761	Switch
arista	AristaEOS	aristaDCS7150S64CL	1.3.6.14.1.30065.1.3011.7150.3282.64.2745	Switch
arista	AristaEOS	aristaDCS7504	1.3.6.14.1.30065.1.3011.7504	Switch
arista	AristaEOS	aristaDCS7508	1.3.6.14.1.30065.1.3011.7508	Switch

Aruba Device Driver Report

Supported OS Versions

Description	About Box Display
Dell Networking Aruba OS 2.5.x	Dell Networking Aruba OS 2.5.x
Dell Networking Aruba OS 3.1.x	Dell Networking Aruba OS 3.1.x
Dell Networking Aruba OS 6.0.x	Dell Networking Aruba OS 6.0.x
Dell Networking Aruba OS 6.2.x	Dell Networking Aruba OS 6.2.x
Dell Networking Aruba OS 6.3.x	Dell Networking Aruba OS 6.3.x
Dell Networking Aruba OS 6.4.x	Dell Networking Aruba OS 6.4.x

Supported Device Models

Driver	OS	Model	SysObjectId	Type
aruba	ArubaOS	Access Point	1.3.6.1.4.1.14823.1.2.9999	WirelessAccessPoint
aruba	ArubaOS	Access Point 1200	1.3.6.1.4.1.14823.1.2.8	WirelessAccessPoint
aruba	ArubaOS	Access Point 2E	1.3.6.1.4.1.14823.1.2.7	WirelessAccessPoint
aruba	ArubaOS	Access Point 40	1.3.6.1.4.1.14823.1.2.12	WirelessAccessPoint
aruba	ArubaOS	Access Point 41	1.3.6.1.4.1.14823.1.2.13	WirelessAccessPoint
aruba	ArubaOS	Access Point 50	1.3.6.1.4.1.14823.1.2.1	WirelessAccessPoint
aruba	ArubaOS	Access Point 52	1.3.6.1.4.1.14823.1.2.2	WirelessAccessPoint
aruba	ArubaOS	Access Point 60	1.3.6.1.4.1.14823.1.2.3	WirelessAccessPoint
aruba	ArubaOS	Access Point 61	1.3.6.1.4.1.14823.1.2.6	WirelessAccessPoint
aruba	ArubaOS	Access Point 61a	1.3.6.1.4.1.14823.1.2.4	WirelessAccessPoint
aruba	ArubaOS	Access Point 65	1.3.6.1.4.1.14823.1.2.14	WirelessAccessPoint
aruba	ArubaOS	Access Point 70	1.3.6.1.4.1.14823.1.2.5	WirelessAccessPoint
aruba	ArubaOS	Access Point 80M	1.3.6.1.4.1.14823.1.2.10	WirelessAccessPoint
aruba	ArubaOS	Access Point 80MB	1.3.6.1.4.1.14823.1.2.18	WirelessAccessPoint
aruba	ArubaOS	Access Point 80S	1.3.6.1.4.1.14823.1.2.9	WirelessAccessPoint
aruba	ArubaOS	Access Point 80SB	1.3.6.1.4.1.14823.1.2.19	WirelessAccessPoint
aruba	ArubaOS	Access Point Duo	1.3.6.1.4.1.14823.1.2.17	WirelessAccessPoint
aruba	ArubaOS	Access Point Duo WJ	1.3.6.1.4.1.14823.1.2.16	WirelessAccessPoint
aruba	ArubaOS	Access Point Mw1700	1.3.6.1.4.1.14823.1.2.15	WirelessAccessPoint
aruba	ArubaOS	Access Point WG 102	1.3.6.1.4.1.14823.1.2.11	WirelessAccessPoint
aruba	ArubaOS	Mobility Controller	1.3.6.1.4.1.14823.1.1.9999	Switch
aruba	ArubaOS	Mobility Controller 200	1.3.6.1.4.1.14823.1.1.10	Switch
aruba	ArubaOS	Mobility Controller 2400	1.3.6.1.4.1.14823.1.1.2	Switch
aruba	ArubaOS	Mobility Controller 2400E	1.3.6.1.4.1.14823.1.1.7	Switch

aruba	ArubaOS	Mobility Controller 2424	1.3.6.1.4.1.14823.1.1.11	Switch
aruba	ArubaOS	Mobility Controller 5000	1.3.6.1.4.1.14823.1.1.1	Switch
aruba	ArubaOS	Mobility Controller 6000	1.3.6.1.4.1.14823.1.1.4	Switch
aruba	ArubaOS	Mobility Controller 800	1.3.6.1.4.1.14823.1.1.3	Switch
aruba	ArubaOS	Mobility Controller 800E	1.3.6.1.4.1.14823.1.1.8	Switch
aruba	ArubaOS	Mobility Controller 804	1.3.6.1.4.1.14823.1.1.9	Switch
aruba	ArubaOS	PowerConnect W-3200	1.3.6.1.4.1.674.10895.5003	Switch
aruba	ArubaOS	PowerConnect W-3400	1.3.6.1.4.1.674.10895.5004	Switch
aruba	ArubaOS	PowerConnect W-3600	1.3.6.1.4.1.674.10895.5005	Switch
aruba	ArubaOS	PowerConnect W-6000M3	1.3.6.1.4.1.674.10895.5015	Switch
aruba	ArubaOS	PowerConnect W-620	1.3.6.1.4.1.674.10895.5014	Switch
aruba	ArubaOS	PowerConnect W-650	1.3.6.1.4.1.674.10895.5001	Switch
aruba	ArubaOS	PowerConnect W-651	1.3.6.1.4.1.674.10895.5002	Switch
aruba	ArubaOS	PowerConnect W-7005	1.3.6.1.4.1.674.10895.5043	Switch
aruba	ArubaOS	PowerConnect W-7010	1.3.6.1.4.1.674.10895.5044	Switch
aruba	ArubaOS	PowerConnect W-7024	1.3.6.1.4.1.674.10895.5051	Switch
aruba	ArubaOS	PowerConnect W-7025	1.3.6.1.4.1.674.10895.5050	Switch
aruba	ArubaOS	PowerConnect W-7030	1.3.6.1.4.1.674.10895.5049	Switch
aruba	ArubaOS	PowerConnect W-7210	1.3.6.1.4.1.674.10895.5027	Switch
aruba	ArubaOS	PowerConnect W-7220	1.3.6.1.4.1.674.10895.5028	Switch
aruba	ArubaOS	PowerConnect W-7240	1.3.6.1.4.1.674.10895.5029	Switch
aruba	ArubaOS	PowerConnect W-7240XM	1.3.6.1.4.1.674.10895.5053	Switch
aruba	ArubaOS	PowerConnect W-AP103H	1.3.6.1.4.1.674.10895.5046	WirelessAccessPoint
aruba	ArubaOS	PowerConnect W-AP124	1.3.6.1.4.1.674.10895.5009	WirelessAccessPoint
aruba	ArubaOS	PowerConnect W-AP125	1.3.6.1.4.1.674.10895.5010	WirelessAccessPoint
aruba	ArubaOS	PowerConnect W-AP175AC Outdoor (DC)	1.3.6.1.4.1.674.10895.5020	WirelessAccessPoint
aruba	ArubaOS	PowerConnect W-AP68	1.3.6.1.4.1.674.10895.5016	WirelessAccessPoint
aruba	ArubaOS	PowerConnect W-AP68P	1.3.6.1.4.1.674.10895.5017	WirelessAccessPoint
aruba	ArubaOS	PowerConnect W-AP93H	1.3.6.1.4.1.674.10895.5023	WirelessAccessPoint
aruba	ArubaOS	PowerConnect W-IAP 204	1.3.6.1.4.1.674.10895.5047	Switch
aruba	ArubaOS	PowerConnect W-IAP 205	1.3.6.1.4.1.674.10895.5048	Switch
aruba	ArubaOS	PowerConnect W-IAP 205H	1.3.6.1.4.1.674.10895.5055	Switch
aruba	ArubaOS	PowerConnect W-IAP 228	1.3.6.1.4.1.674.10895.5054	Switch
aruba	ArubaOS	PowerConnect W-IAP 277	1.3.6.1.4.1.674.10895.5052	Switch
aruba	ArubaOS	PowerConnect W-IAP 324	1.3.6.1.4.1.674.10895.5056	Switch
aruba	ArubaOS	PowerConnect W-IAP 325	1.3.6.1.4.1.674.10895.5057	Switch
aruba	ArubaOS	PowerConnect W-IAP103	1.3.6.1.4.1.674.10895.5045	Switch
aruba	ArubaOS	PowerConnect W-IAP104	1.3.6.1.4.1.674.10895.5024	Switch
aruba	ArubaOS	PowerConnect W-IAP105	1.3.6.1.4.1.674.10895.5008	Switch
aruba	ArubaOS	PowerConnect W-IAP108	1.3.6.1.4.1.674.10895.5031	Switch
aruba	ArubaOS	PowerConnect W-IAP109	1.3.6.1.4.1.674.10895.5032	Switch
aruba	ArubaOS	PowerConnect W-IAP114	1.3.6.1.4.1.674.10895.5037	Switch
aruba	ArubaOS	PowerConnect W-IAP115	1.3.6.1.4.1.674.10895.5038	Switch
aruba	ArubaOS	PowerConnect W-IAP134	1.3.6.1.4.1.674.10895.5021	Switch

aruba	ArubaOS	PowerConnect W-IAP135	1.3.6.14.1.674.10895.5022	Switch
aruba	ArubaOS	PowerConnect W-IAP155	1.3.6.14.1.674.10895.5035	Switch
aruba	ArubaOS	PowerConnect W-IAP155P	1.3.6.14.1.674.10895.5036	Switch
aruba	ArubaOS	PowerConnect W-IAP175	1.3.6.14.1.674.10895.5030	Switch
aruba	ArubaOS	PowerConnect W-IAP175AC	1.3.6.14.1.674.10895.5019	Switch
aruba	ArubaOS	PowerConnect W-IAP175P	1.3.6.14.1.674.10895.5018	Switch
aruba	ArubaOS	PowerConnect W-IAP214 (11n/11ac)	1.3.6.14.1.674.10895.5041	Switch
aruba	ArubaOS	PowerConnect W-IAP215 (11n/11ac)	1.3.6.14.1.674.10895.5042	Switch
aruba	ArubaOS	PowerConnect W-IAP224 (11ac)	1.3.6.14.1.674.10895.5033	Switch
aruba	ArubaOS	PowerConnect W-IAP225 (11ac)	1.3.6.14.1.674.10895.5034	Switch
aruba	ArubaOS	PowerConnect W-IAP274 (Outdoor/11n/11ac)	1.3.6.14.1.674.10895.5039	Switch
aruba	ArubaOS	PowerConnect W-IAP275 (Outdoor/11n/11ac)	1.3.6.14.1.674.10895.5040	Switch
aruba	ArubaOS	PowerConnect W-IAP3WN	1.3.6.14.1.674.10895.5025	Switch
aruba	ArubaOS	PowerConnect W-IAP3WNP	1.3.6.14.1.674.10895.5026	Switch
aruba	ArubaOS	PowerConnect W-IAP92	1.3.6.14.1.674.10895.5006	Switch
aruba	ArubaOS	PowerConnect W-IAP93	1.3.6.14.1.674.10895.5007	Switch
aruba	ArubaOS	PowerConnect W-RAP2WG	1.3.6.14.1.674.10895.5013	WirelessAccessPoint
aruba	ArubaOS	PowerConnect W-RAP5	1.3.6.14.1.674.10895.5011	WirelessAccessPoint
aruba	ArubaOS	PowerConnect W-RAP5WN	1.3.6.14.1.674.10895.5012	WirelessAccessPoint

Brocade RX Series Device Driver Report

Supported OS Versions

Description	About Box Display
IronWare OS 2.7.x	IronWare OS 2.7.x

Supported Device Models

Driver	OS	Model	SysObjectId	Type
brocaderx	IronWare	ADX 1000 Router	1.3.6.1.4.1.1991.1.3.47.12.2	Switch
brocaderx	IronWare	ADX 10000 Router	1.3.6.1.4.1.1991.1.3.47.18.2	Switch
brocaderx	IronWare	ADX 4000 Router	1.3.6.1.4.1.1991.1.3.47.14.2	Switch
brocaderx	IronWare	FCX 624	1.3.6.1.4.1.1991.1.3.54.1.4.1.1	SWRT
brocaderx	IronWare	FCX 624 Advanced Router	1.3.6.1.4.1.1991.1.3.54.1.4.1.4	SWRT
brocaderx	IronWare	FCX 624 Base L3 Router	1.3.6.1.4.1.1991.1.3.54.1.4.1.2	SWRT
brocaderx	IronWare	FCX 624 Router	1.3.6.1.4.1.1991.1.3.54.1.4.1.3	SWRT
brocaderx	IronWare	FCX 624S Advanced Router	1.3.6.1.4.1.1991.1.3.54.1.1.1.4	SWRT
brocaderx	IronWare	FCX 624S Base L3 Router	1.3.6.1.4.1.1991.1.3.54.1.1.1.2	SWRT
brocaderx	IronWare	FCX 624S Router	1.3.6.1.4.1.1991.1.3.54.1.1.1.3	SWRT
brocaderx	IronWare	FCX 624S Switch	1.3.6.1.4.1.1991.1.3.54.1.1.1.1	SWRT
brocaderx	IronWare	FCX-648 Advanced Router	1.3.6.1.4.1.1991.1.3.54.2.4.1.4	SWRT
brocaderx	IronWare	FCX-648 Base L3 Router	1.3.6.1.4.1.1991.1.3.54.2.4.1.2	SWRT
brocaderx	IronWare	FCX-648 Switch	1.3.6.1.4.1.1991.1.3.54.2.4.1.1	SWRT
brocaderx	IronWare	FCX-648-Router	1.3.6.1.4.1.1991.1.3.54.2.4.1.3	SWRT
brocaderx	IronWare	FCX-648S Advanced Router	1.3.6.1.4.1.1991.1.3.54.2.1.1.4	SWRT
brocaderx	IronWare	FCX-648S Base L3 Router	1.3.6.1.4.1.1991.1.3.54.2.1.1.2	SWRT
brocaderx	IronWare	FCX-648S Router	1.3.6.1.4.1.1991.1.3.54.2.1.1.3	SWRT
brocaderx	IronWare	FCX-648S Stack FCX	1.3.6.1.4.1.1991.1.3.48.2.1	SWRT
brocaderx	IronWare	FCX-648S Switch	1.3.6.1.4.1.1991.1.3.54.2.1.1.1	SWRT
brocaderx	IronWare	MLXe 4	1.3.6.1.4.1.1991.1.3.55.3.2	SWRT
brocaderx	IronWare	MLXe 4 Switch	1.3.6.1.4.1.1991.1.3.55.3.1	SWRT
brocaderx	IronWare	MLXe _16	1.3.6.1.4.1.1991.1.3.55.1.2	SWRT
brocaderx	IronWare	MLXe _16 Switch	1.3.6.1.4.1.1991.1.3.55.1.1	SWRT
brocaderx	IronWare	MLXe-8	1.3.6.1.4.1.1991.1.3.55.2.2	SWRT
brocaderx	IronWare	MLXe-8 Switch	1.3.6.1.4.1.1991.1.3.55.2.1	SWRT
brocaderx	IronWare	RX-16 Router	1.3.6.1.4.1.1991.1.3.40.1.2	RTR
brocaderx	IronWare	RX-16 Switch	1.3.6.1.4.1.1991.1.3.40.1.1	SWRT
brocaderx	IronWare	RX-4 Router	1.3.6.1.4.1.1991.1.3.40.3.2	SWRT

brocaderx	IronWare	RX-4 Switch	1.3.6.1.4.1.1991.1.340.3.1	SWRT
brocaderx	IronWare	RX-8 Router	1.3.6.1.4.1.1991.1.340.2.2	SWRT
brocaderx	IronWare	RX-8 Switch	1.3.6.1.4.1.1991.1.340.2.1	SWRT
brocaderx	IronWare	ServerIronGT E 1000 Router	1.3.6.1.4.1.1991.1.347.9.2	SWRT
brocaderx	IronWare	ServerIronGT E 1000 Switch	1.3.6.1.4.1.1991.1.347.9.1	SWRT
brocaderx	IronWare	TurboIron Router	1.3.6.1.4.1.1991.1.353.1.2	SWRT
brocaderx	IronWare	TurboIron Switch	1.3.6.1.4.1.1991.1.353.1.1	SWRT

Cisco IOS Device Devices Report

Supported OS Versions

Description	About Box Display
12.0.x	IOS 12.0.x
12.1.x	IOS 12.1.x
12.2.x	IOS 12.2.x
12.3.x	IOS 12.3.x
12.4.x	IOS 12.4.x
15.x	15.x

Supported Device Models

Driver	OS	Model	SysObjectId	Type
cisco	Cisco IOS	1000	1.3.6.14.1.9.1.140	RTR
cisco	Cisco IOS	10005	1.3.6.14.1.9.1.1437	RTR
cisco	Cisco IOS	10008	1.3.6.14.1.9.1.1438	RTR
cisco	Cisco IOS	10012	1.3.6.14.1.9.1.1317	RTR
cisco	Cisco IOS	1003	1.3.6.14.1.9.1.141	RTR
cisco	Cisco IOS	1004	1.3.6.14.1.9.1.144	RTR
cisco	Cisco IOS	1005	1.3.6.14.1.9.1.149	RTR
cisco	Cisco IOS	10400	1.3.6.14.1.9.1.272	RTR
cisco	Cisco IOS	10720	1.3.6.14.1.9.1.397	RTR
cisco	Cisco IOS	12004	1.3.6.14.1.9.1.181.ios	SWRT
cisco	Cisco IOS	12006	1.3.6.14.1.9.1.590.ios	SWRT
cisco	Cisco IOS	12008	1.3.6.14.1.9.1.182.ios	SWRT
cisco	Cisco IOS	12010	1.3.6.14.1.9.1.348.ios	SWRT
cisco	Cisco IOS	12012	1.3.6.14.1.9.1.173.ios	SWRT
cisco	Cisco IOS	12016	1.3.6.14.1.9.1.273.ios	SWRT
cisco	Cisco IOS	12404	1.3.6.14.1.9.1.423.ios	SWRT
cisco	Cisco IOS	12406	1.3.6.14.1.9.1.388.ios	SWRT
cisco	Cisco IOS	12410	1.3.6.14.1.9.1.394.ios	SWRT
cisco	Cisco IOS	12416	1.3.6.14.1.9.1.385.ios	SWRT
cisco	Cisco IOS	1401	1.3.6.14.1.9.1.206	RTR
cisco	Cisco IOS	1407	1.3.6.14.1.9.1.249	RTR
cisco	Cisco IOS	1417	1.3.6.14.1.9.1.250	RTR
cisco	Cisco IOS	1502	1.3.6.14.1.9.1.161	RTR
cisco	Cisco IOS	1503	1.3.6.14.1.9.1.160	RTR
cisco	Cisco IOS	1538M	1.3.6.14.1.9.1.224	RTR
cisco	Cisco IOS	1548M	1.3.6.14.1.9.1.225	RTR
cisco	Cisco IOS	1601	1.3.6.14.1.9.1.113	RTR

cisco	Cisco IOS	1602	1.3.6.14.1.9.1.114	RTR
cisco	Cisco IOS	1603	1.3.6.14.1.9.1.115	RTR
cisco	Cisco IOS	1604	1.3.6.14.1.9.1.116	RTR
cisco	Cisco IOS	1605	1.3.6.14.1.9.1.172	RTR
cisco	Cisco IOS	1701	1.3.6.14.1.9.1.550	RTR
cisco	Cisco IOS	1710	1.3.6.14.1.9.1.200	RTR
cisco	Cisco IOS	1711	1.3.6.14.1.9.1.538	RTR
cisco	Cisco IOS	1712	1.3.6.14.1.9.1.539	RTR
cisco	Cisco IOS	1720	1.3.6.14.1.9.1.201	RTR
cisco	Cisco IOS	1721	1.3.6.14.1.9.1.444	RTR
cisco	Cisco IOS	1750	1.3.6.14.1.9.1.216	RTR
cisco	Cisco IOS	1751	1.3.6.14.1.9.1.326	RTR
cisco	Cisco IOS	1760	1.3.6.14.1.9.1.416	RTR
cisco	Cisco IOS	1801	1.3.6.14.1.9.1.638	RTR
cisco	Cisco IOS	1802	1.3.6.14.1.9.1.639	RTR
cisco	Cisco IOS	1803	1.3.6.14.1.9.1.640	RTR
cisco	Cisco IOS	1811	1.3.6.14.1.9.1.641	RTR
cisco	Cisco IOS	1812	1.3.6.14.1.9.1.642	RTR
cisco	Cisco IOS	1841	1.3.6.14.1.9.1.620	RTR
cisco	Cisco IOS	1841-C/K9	1.3.6.14.1.9.1.1236	RTR
cisco	Cisco IOS	1900	1.3.6.14.1.9.1.398	RTR
cisco	Cisco IOS	1905	1.3.6.14.1.9.1.1192	RTR
cisco	Cisco IOS	1906CK9	1.3.6.14.1.9.1.1268	RTR
cisco	Cisco IOS	1921K9	1.3.6.14.1.9.1.1191	RTR
cisco	Cisco IOS	1941	1.3.6.14.1.9.1.1047	RTR
cisco	Cisco IOS	1941W	1.3.6.14.1.9.1.1095	RTR
cisco	Cisco IOS	2000	1.3.6.14.1.9.1.10	RTR
cisco	Cisco IOS	2102	1.3.6.14.1.9.1.15	RTR
cisco	Cisco IOS	2202	1.3.6.14.1.9.1.16	RTR
cisco	Cisco IOS	2400-24TS A	1.3.6.14.1.9.1.734	Switch
cisco	Cisco IOS	2400-24TS D	1.3.6.14.1.9.1.735	Switch
cisco	Cisco IOS	2420IAD	1.3.6.14.1.9.1.362	RTR
cisco	Cisco IOS	2501	1.3.6.14.1.9.1.17	RTR
cisco	Cisco IOS	2502	1.3.6.14.1.9.1.18	RTR
cisco	Cisco IOS	2503	1.3.6.14.1.9.1.19	RTR
cisco	Cisco IOS	2504	1.3.6.14.1.9.1.20	RTR

cisco	Cisco IOS	2505	13.6.14.1.9.1.21	RTR
cisco	Cisco IOS	2506	13.6.14.1.9.1.22	RTR
cisco	Cisco IOS	2507	13.6.14.1.9.1.23	RTR
cisco	Cisco IOS	2508	13.6.14.1.9.1.24	RTR
cisco	Cisco IOS	2509	13.6.14.1.9.1.25	RTR
cisco	Cisco IOS	2510	13.6.14.1.9.1.26	RTR
cisco	Cisco IOS	2511	13.6.14.1.9.1.27	RTR
cisco	Cisco IOS	2512	13.6.14.1.9.1.28	RTR
cisco	Cisco IOS	2513	13.6.14.1.9.1.29	RTR
cisco	Cisco IOS	2514	13.6.14.1.9.1.30	RTR
cisco	Cisco IOS	2515	13.6.14.1.9.1.31	RTR
cisco	Cisco IOS	2516	13.6.14.1.9.1.42	RTR
cisco	Cisco IOS	2517	13.6.14.1.9.1.67	RTR
cisco	Cisco IOS	2518	13.6.14.1.9.1.68	RTR
cisco	Cisco IOS	2519	13.6.14.1.9.1.69	RTR
cisco	Cisco IOS	2520	13.6.14.1.9.1.70	RTR
cisco	Cisco IOS	2520-16S-8PC	13.6.14.1.9.1.1246	RTR
cisco	Cisco IOS	2520-24TC	13.6.14.1.9.1.1245	RTR
cisco	Cisco IOS	2521	13.6.14.1.9.1.71	RTR
cisco	Cisco IOS	2522	13.6.14.1.9.1.72	RTR
cisco	Cisco IOS	2523	13.6.14.1.9.1.73	RTR
cisco	Cisco IOS	2524	13.6.14.1.9.1.74	RTR
cisco	Cisco IOS	2525	13.6.14.1.9.1.75	RTR
cisco	Cisco IOS	2610	13.6.14.1.9.1.185	RTR
cisco	Cisco IOS	2610M	13.6.14.1.9.1.418	RTR
cisco	Cisco IOS	2610XM	13.6.14.1.9.1.466	RTR
cisco	Cisco IOS	2611	13.6.14.1.9.1.186	RTR
cisco	Cisco IOS	2611M	13.6.14.1.9.1.419	RTR
cisco	Cisco IOS	2611XM	13.6.14.1.9.1.467	RTR
cisco	Cisco IOS	2612	13.6.14.1.9.1.187	RTR
cisco	Cisco IOS	2613	13.6.14.1.9.1.195	RTR
cisco	Cisco IOS	2620	13.6.14.1.9.1.208	RTR
cisco	Cisco IOS	2620XM	13.6.14.1.9.1.468	RTR
cisco	Cisco IOS	2621	13.6.14.1.9.1.209	RTR
cisco	Cisco IOS	2621XM	13.6.14.1.9.1.469	RTR
cisco	Cisco IOS	2650	13.6.14.1.9.1.319	RTR

cisco	Cisco IOS	2650XM	1.3.6.14.1.9.1.1470	RTR
cisco	Cisco IOS	2651	1.3.6.14.1.9.1.320	RTR
cisco	Cisco IOS	2651XM	1.3.6.14.1.9.1.1471	RTR
cisco	Cisco IOS	2691	1.3.6.14.1.9.1.1413	RTR
cisco	Cisco IOS	2801	1.3.6.14.1.9.1.1619	RTR
cisco	Cisco IOS	2801-C/K9	1.3.6.14.1.9.1.1237	RTR
cisco	Cisco IOS	2811	1.3.6.14.1.9.1.1576	RTR
cisco	Cisco IOS	2811-C/K9	1.3.6.14.1.9.1.1238	RTR
cisco	Cisco IOS	2821	1.3.6.14.1.9.1.1577	RTR
cisco	Cisco IOS	2821-C/K9	1.3.6.14.1.9.1.1239	RTR
cisco	Cisco IOS	2851	1.3.6.14.1.9.1.1578	RTR
cisco	Cisco IOS	2851-C/K9	1.3.6.14.1.9.1.1240	RTR
cisco	Cisco IOS	2901	1.3.6.14.1.9.1.1046	RTR
cisco	Cisco IOS	2908xl	1.3.6.14.1.9.1.170	Switch
cisco	Cisco IOS	2911	1.3.6.14.1.9.1.1045	RTR
cisco	Cisco IOS	2912LREXL	1.3.6.14.1.9.1.370	Switch
cisco	Cisco IOS	2912fxl	1.3.6.14.1.9.1.219	Switch
cisco	Cisco IOS	2912mxl	1.3.6.14.1.9.1.221	Switch
cisco	Cisco IOS	2916xl	1.3.6.14.1.9.1.171	Switch
cisco	Cisco IOS	2921	1.3.6.14.1.9.1.1044	RTR
cisco	Cisco IOS	2924LREXL	1.3.6.14.1.9.1.369	Switch
cisco	Cisco IOS	2924XL	1.3.6.14.1.9.1.183	Switch
cisco	Cisco IOS	2924cxl	1.3.6.14.1.9.1.184	Switch
cisco	Cisco IOS	2924fcx1	1.3.6.14.1.9.1.218	Switch
cisco	Cisco IOS	2924fx1	1.3.6.14.1.9.1.217	Switch
cisco	Cisco IOS	2924mxl	1.3.6.14.1.9.1.220	Switch
cisco	Cisco IOS	2948GL3	1.3.6.14.1.9.1.386	Switch
cisco	Cisco IOS	2948gL3	1.3.6.14.1.9.1.275	Switch
cisco	Cisco IOS	295012	1.3.6.14.1.9.1.323	Switch
cisco	Cisco IOS	295012G	1.3.6.14.1.9.1.427	Switch
cisco	Cisco IOS	295024	1.3.6.14.1.9.1.324	Switch
cisco	Cisco IOS	295024C	1.3.6.14.1.9.1.325	Switch
cisco	Cisco IOS	295024G	1.3.6.14.1.9.1.428	Switch
cisco	Cisco IOS	295024GDC	1.3.6.14.1.9.1.472	Switch
cisco	Cisco IOS	295024LREG	1.3.6.14.1.9.1.484	Switch
cisco	Cisco IOS	295024LRESt	1.3.6.14.1.9.1.482	Switch

cisco	Cisco IOS	295024S	1.3.6.14.1.9.1.430	Switch
cisco	Cisco IOS	295024SX	1.3.6.14.1.9.1.480	Switch
cisco	Cisco IOS	295048G	1.3.6.14.1.9.1.429	Switch
cisco	Cisco IOS	295048SX	1.3.6.14.1.9.1.560	Switch
cisco	Cisco IOS	295048T	1.3.6.14.1.9.1.559	Switch
cisco	Cisco IOS	29508LRESt	1.3.6.14.1.9.1.483	Switch
cisco	Cisco IOS	2950T	1.3.6.14.1.9.1.359	Switch
cisco	Cisco IOS	2951	1.3.6.14.1.9.1.1043	RTR
cisco	Cisco IOS	2955C12	1.3.6.14.1.9.1.489	Switch
cisco	Cisco IOS	2955S12	1.3.6.14.1.9.1.508	Switch
cisco	Cisco IOS	2955T12	1.3.6.14.1.9.1.488	Switch
cisco	Cisco IOS	2960-24-S	1.3.6.14.1.9.1.929	Switch
cisco	Cisco IOS	2960-24LC-S	1.3.6.14.1.9.1.1146	Switch
cisco	Cisco IOS	2960-24LT-L	1.3.6.14.1.9.1.951	Switch
cisco	Cisco IOS	2960-24PC-L	1.3.6.14.1.9.1.950	Switch
cisco	Cisco IOS	2960-24PC-S	1.3.6.14.1.9.1.1147	Switch
cisco	Cisco IOS	2960-24TC	1.3.6.14.1.9.1.694	Switch
cisco	Cisco IOS	2960-24TC-S	1.3.6.14.1.9.1.928	Switch
cisco	Cisco IOS	2960-24TT	1.3.6.14.1.9.1.716	Switch
cisco	Cisco IOS	2960-48PST-L	1.3.6.14.1.9.1.1016	Switch
cisco	Cisco IOS	2960-48PST-S	1.3.6.14.1.9.1.1148	Switch
cisco	Cisco IOS	2960-48TC	1.3.6.14.1.9.1.695	Switch
cisco	Cisco IOS	2960-48TC-S	1.3.6.14.1.9.1.927	Switch
cisco	Cisco IOS	2960-48TT	1.3.6.14.1.9.1.717	Switch
cisco	Cisco IOS	2960-48TT-S	1.3.6.14.1.9.1.1005	Switch
cisco	Cisco IOS	2960-8TC	1.3.6.14.1.9.1.798	Switch
cisco	Cisco IOS	2960-8TC-S	1.3.6.14.1.9.1.1006	Switch
cisco	Cisco IOS	2960-S	1.3.6.14.1.9.1.1208	Switch
cisco	Cisco IOS	2960G-24TC	1.3.6.14.1.9.1.696	Switch
cisco	Cisco IOS	2960G-8TC	1.3.6.14.1.9.1.799	Switch
cisco	Cisco IOS	2960PD-8TT-L	1.3.6.14.1.9.1.952	Switch
cisco	Cisco IOS	2960S-24PD-L	1.3.6.14.1.9.1.1261	Switch
cisco	Cisco IOS	2960S-24PS-L	1.3.6.14.1.9.1.1265	Switch
cisco	Cisco IOS	2960S-48FPD-L	1.3.6.14.1.9.1.1258	Switch
cisco	Cisco IOS	2960S-48FPS-L	1.3.6.14.1.9.1.1263	Switch
cisco	Cisco IOS	2960S-48LPD-L	1.3.6.14.1.9.1.1259	Switch
cisco	Cisco IOS	2960S-48LPS-L	1.3.6.14.1.9.1.1264	Switch

cisco	Cisco IOS	2970G-24TS-E	1.3.6.14.1.9.1.561	Switch
cisco	Cisco IOS	3400-24TS A	1.3.6.14.1.9.1.736	Switch
cisco	Cisco IOS	3400-24TS-D	1.3.6.14.1.9.1.737	Switch
cisco	Cisco IOS	3400E-24TS M	1.3.6.14.1.9.1.1009	Switch
cisco	Cisco IOS	3400EG-12CS M	1.3.6.14.1.9.1.1008	Switch
cisco	Cisco IOS	3400EG-2CS A	1.3.6.14.1.9.1.1007	Switch
cisco	Cisco IOS	3400G-12CS A	1.3.6.14.1.9.1.780	Switch
cisco	Cisco IOS	3400G-12CS D	1.3.6.14.1.9.1.781	Switch
cisco	Cisco IOS	3400G-2CS A	1.3.6.14.1.9.1.825	Switch
cisco	Cisco IOS	3508G-XL	1.3.6.14.1.9.1.246	Switch
cisco	Cisco IOS	3512XL	1.3.6.14.1.9.1.247	Switch
cisco	Cisco IOS	3524XL	1.3.6.14.1.9.1.248	Switch
cisco	Cisco IOS	3524tXLEn	1.3.6.14.1.9.1.287	Switch
cisco	Cisco IOS	3548XL	1.3.6.14.1.9.1.278	Switch
cisco	Cisco IOS	3550-12G	1.3.6.14.1.9.1.431	Switch
cisco	Cisco IOS	3550-12T	1.3.6.14.1.9.1.368	Switch
cisco	Cisco IOS	3550-24	1.3.6.14.1.9.1.366	Switch
cisco	Cisco IOS	3550-24-DC	1.3.6.14.1.9.1.452	Switch
cisco	Cisco IOS	3550-24Mmf	1.3.6.14.1.9.1.453	Switch
cisco	Cisco IOS	3550-48	1.3.6.14.1.9.1.367	Switch
cisco	Cisco IOS	3550PWR-24	1.3.6.14.1.9.1.485	Switch
cisco	Cisco IOS	3560	1.3.6.14.1.9.1.633	Switch
cisco	Cisco IOS	3560-8PC	1.3.6.14.1.9.1.797	Switch
cisco	Cisco IOS	356024PS	1.3.6.14.1.9.1.563	Switch
cisco	Cisco IOS	356048PS	1.3.6.14.1.9.1.564	Switch
cisco	Cisco IOS	3560E-24PD	1.3.6.14.1.9.1.795	Switch
cisco	Cisco IOS	3560E-24TD	1.3.6.14.1.9.1.793	Switch
cisco	Cisco IOS	3560E-48PD	1.3.6.14.1.9.1.796	Switch
cisco	Cisco IOS	3560E-48TD	1.3.6.14.1.9.1.794	Switch
cisco	Cisco IOS	3560G24PS	1.3.6.14.1.9.1.614	Switch
cisco	Cisco IOS	3560G24TS	1.3.6.14.1.9.1.615	Switch
cisco	Cisco IOS	3560G48PS	1.3.6.14.1.9.1.616	Switch
cisco	Cisco IOS	3560G48TS	1.3.6.14.1.9.1.617	Switch
cisco	Cisco IOS	3560X-24	1.3.6.14.1.9.1.1226	Switch
cisco	Cisco IOS	3560X-24P	1.3.6.14.1.9.1.1228	Switch
cisco	Cisco IOS	3560X-48	1.3.6.14.1.9.1.1227	Switch
cisco	Cisco IOS	3560X-48P	1.3.6.14.1.9.1.1229	Switch

cisco	Cisco IOS	3600X-24TS	1.3.6.14.1.9.1.1250	Switch
cisco	Cisco IOS	3620	1.3.6.14.1.9.1.122	RTR
cisco	Cisco IOS	3640	1.3.6.14.1.9.1.110	RTR
cisco	Cisco IOS	3650E-48TS	1.3.6.14.1.9.1.634	Switch
cisco	Cisco IOS	3660	1.3.6.14.1.9.1.205	RTR
cisco	Cisco IOS	3661Ac	1.3.6.14.1.9.1.338	RTR
cisco	Cisco IOS	3661Dc	1.3.6.14.1.9.1.339	RTR
cisco	Cisco IOS	3662Ac	1.3.6.14.1.9.1.340	RTR
cisco	Cisco IOS	3662AcCo	1.3.6.14.1.9.1.342	RTR
cisco	Cisco IOS	3662Dc	1.3.6.14.1.9.1.341	RTR
cisco	Cisco IOS	3662DcCo	1.3.6.14.1.9.1.343	RTR
cisco	Cisco IOS	3725	1.3.6.14.1.9.1.414	RTR
cisco	Cisco IOS	3745	1.3.6.14.1.9.1.436	RTR
cisco	Cisco IOS	375024ME	1.3.6.14.1.9.1.574	Switch
cisco	Cisco IOS	3750E-24PD	1.3.6.14.1.9.1.792	Switch
cisco	Cisco IOS	3750E-24TD	1.3.6.14.1.9.1.789	Switch
cisco	Cisco IOS	3750E-48PD	1.3.6.14.1.9.1.791	Switch
cisco	Cisco IOS	3750E-48TD	1.3.6.14.1.9.1.790	Switch
cisco	Cisco IOS	3750G16TD	1.3.6.14.1.9.1.591	Switch
cisco	Cisco IOS	3750Ge12Sfp	1.3.6.14.1.9.1.530	Switch
cisco	Cisco IOS	3750X-24	1.3.6.14.1.9.1.1222	Switch
cisco	Cisco IOS	3750X-24P	1.3.6.14.1.9.1.1224	Switch
cisco	Cisco IOS	3750X-48	1.3.6.14.1.9.1.1223	Switch
cisco	Cisco IOS	3750X-48P	1.3.6.14.1.9.1.1225	Switch
cisco	Cisco IOS	3750_24	1.3.6.14.1.9.1.511	Switch
cisco	Cisco IOS	3750_24T	1.3.6.14.1.9.1.514	Switch
cisco	Cisco IOS	3750_24TS	1.3.6.14.1.9.1.513	Switch
cisco	Cisco IOS	3750_48	1.3.6.14.1.9.1.512	Switch
cisco	Cisco IOS	37xxStack	1.3.6.14.1.9.1.516	Switch
cisco	Cisco IOS	3800X-24FSM	1.3.6.14.1.9.1.1252	Switch
cisco	Cisco IOS	3825	1.3.6.14.1.9.1.543	RTR
cisco	Cisco IOS	3825-C/K9	1.3.6.14.1.9.1.1241	RTR
cisco	Cisco IOS	3825-CNV/K9	1.3.6.14.1.9.1.1243	RTR
cisco	Cisco IOS	3845	1.3.6.14.1.9.1.544	RTR
cisco	Cisco IOS	3845-C/K9	1.3.6.14.1.9.1.1242	RTR
cisco	Cisco IOS	3845-CNV/K9	1.3.6.14.1.9.1.1244	RTR
cisco	Cisco IOS	3850-48P-S	1.3.6.14.1.9.1.1643	Switch

cisco	Cisco IOS	3925	1.3.6.14.1.9.1.1042	RTR
cisco	Cisco IOS	3925-E	1.3.6.14.1.9.1.1145	RTR
cisco	Cisco IOS	3945	1.3.6.14.1.9.1.1041	RTR
cisco	Cisco IOS	4000	1.3.6.14.1.9.1.7	RTR
cisco	Cisco IOS	4000RSC	1.3.6.14.1.9.1.300	Switch
cisco	Cisco IOS	4006	1.3.6.14.1.9.1.448	Switch
cisco	Cisco IOS	4200	1.3.6.14.1.9.1.399	Switch
cisco	Cisco IOS	4500	1.3.6.14.1.9.1.14	RTR
cisco	Cisco IOS	4503	1.3.6.14.1.9.1.503	Switch
cisco	Cisco IOS	4506	1.3.6.14.1.9.1.502	Switch
cisco	Cisco IOS	4507	1.3.6.14.1.9.1.501	Switch
cisco	Cisco IOS	4510	1.3.6.14.1.9.1.537	Switch
cisco	Cisco IOS	4700	1.3.6.14.1.9.1.50	RTR
cisco	Cisco IOS	4840GL3	1.3.6.14.1.9.1.312	Switch
cisco	Cisco IOS	4908GL3	1.3.6.14.1.9.1.298	Switch
cisco	Cisco IOS	4924-10GE	1.3.6.14.1.9.1.788	Switch
cisco	Cisco IOS	4948	1.3.6.14.1.9.1.626	Switch
cisco	Cisco IOS	494810GE	1.3.6.14.1.9.1.659	Switch
cisco	Cisco IOS	4kGateway	1.3.6.14.1.9.1.318	Switch
cisco	Cisco IOS	5300AS	1.3.6.14.1.9.1.162	RTR
cisco	Cisco IOS	5kRsfc	1.3.6.14.1.9.1.257	Switch
cisco	Cisco IOS	6006IOS	1.3.6.14.1.9.1.280	Switch
cisco	Cisco IOS	6009IOS	1.3.6.14.1.9.1.281	Switch
cisco	Cisco IOS	6500	1.3.6.14.1.9.1.522	SWRT
cisco	Cisco IOS	6500-VSS-1440	1.3.6.14.1.9.1.896	Switch
cisco	Cisco IOS	6503	1.3.6.14.1.9.1.449.catos	SWRT
cisco	Cisco IOS	6504	1.3.6.14.1.9.12.3.1.3.504	Switch
cisco	Cisco IOS	6506	1.3.6.14.1.9.1.282.ios	SWRT
cisco	Cisco IOS	6506(CatOS)	1.3.6.14.1.9.1.282.catos	SWRT
cisco	Cisco IOS	6509	1.3.6.14.1.9.1.283.ios	SWRT
cisco	Cisco IOS	6509(CatOS)	1.3.6.14.1.9.1.283.catos	SWRT
cisco	Cisco IOS	6509-SP	1.3.6.14.1.9.1.310.catos	SWRT
cisco	Cisco IOS	6513	1.3.6.14.1.9.1.400.catos	SWRT
cisco	Cisco IOS	6524 GS-8S	1.3.6.14.1.9.1.719	Switch
cisco	Cisco IOS	6524 GT-8S	1.3.6.14.1.9.1.720	Switch
cisco	Cisco IOS	6K MSFC 2A Module	1.3.6.14.1.9.1.706	BLDSVR
cisco	Cisco IOS	6kGateway	1.3.6.14.1.9.1.573	Switch

cisco	Cisco IOS	7120Ae3	1.3.6.14.1.9.1.263	RTR
cisco	Cisco IOS	7120At3	1.3.6.14.1.9.1.262	RTR
cisco	Cisco IOS	7120E3	1.3.6.14.1.9.1.261	RTR
cisco	Cisco IOS	7120Quadt1	1.3.6.14.1.9.1.259	RTR
cisco	Cisco IOS	7120Smi3	1.3.6.14.1.9.1.264	RTR
cisco	Cisco IOS	7120T3	1.3.6.14.1.9.1.260	RTR
cisco	Cisco IOS	7140Dualae3	1.3.6.14.1.9.1.268	RTR
cisco	Cisco IOS	7140Dualat3	1.3.6.14.1.9.1.267	RTR
cisco	Cisco IOS	7140Duale3	1.3.6.14.1.9.1.266	RTR
cisco	Cisco IOS	7140Dualfe	1.3.6.14.1.9.1.277	RTR
cisco	Cisco IOS	7140Dualmm3	1.3.6.14.1.9.1.269	RTR
cisco	Cisco IOS	7140Dualt3	1.3.6.14.1.9.1.265	RTR
cisco	Cisco IOS	7140Octt1	1.3.6.14.1.9.1.276	RTR
cisco	Cisco IOS	7150Dualfe	1.3.6.14.1.9.1.355	RTR
cisco	Cisco IOS	7150Dualt3	1.3.6.14.1.9.1.357	RTR
cisco	Cisco IOS	7150Octt1	1.3.6.14.1.9.1.356	RTR
cisco	Cisco IOS	7202	1.3.6.14.1.9.1.194	RTR
cisco	Cisco IOS	7204	1.3.6.14.1.9.1.125	RTR
cisco	Cisco IOS	7204VXR	1.3.6.14.1.9.1.223	RTR
cisco	Cisco IOS	7206	1.3.6.14.1.9.1.108	RTR
cisco	Cisco IOS	7206VXR	1.3.6.14.1.9.1.222	RTR
cisco	Cisco IOS	7301	1.3.6.14.1.9.1.476	RTR
cisco	Cisco IOS	7304	1.3.6.14.1.9.1.439	RTR
cisco	Cisco IOS	7401ASR	1.3.6.14.1.9.1.403	RTR
cisco	Cisco IOS	7401VXR	1.3.6.14.1.9.1.376	RTR
cisco	Cisco IOS	7505	1.3.6.14.1.9.1.148	RTR
cisco	Cisco IOS	7507	1.3.6.14.1.9.1.145	RTR
cisco	Cisco IOS	7507mx	1.3.6.14.1.9.1.290	RTR
cisco	Cisco IOS	7507z	1.3.6.14.1.9.1.288	RTR
cisco	Cisco IOS	7513	1.3.6.14.1.9.1.146	RTR
cisco	Cisco IOS	7513mx	1.3.6.14.1.9.1.291	RTR
cisco	Cisco IOS	7513z	1.3.6.14.1.9.1.289	RTR
cisco	Cisco IOS	7576	1.3.6.14.1.9.1.204	RTR
cisco	Cisco IOS	7603(Ws-C6503)	1.3.6.14.1.9.5.56.ios	SWRT
cisco	Cisco IOS	7603-IOS	1.3.6.14.1.9.1.401	RTR
cisco	Cisco IOS	7603-S	1.3.6.14.1.9.1.862	RTR
cisco	Cisco IOS	7604	1.3.6.14.1.9.1.658	RTR

cisco	Cisco IOS	7604(WS-C6504-E)	1.3.6.14.1.9.5.64.ios	SWRT
cisco	Cisco IOS	7606(WS-C6506)	1.3.6.14.1.9.5.45.ios	SWRT
cisco	Cisco IOS	7606(WS-C6509-NEB)	1.3.6.14.1.9.5.47.ios	SWRT
cisco	Cisco IOS	7606-IOS	1.3.6.14.1.9.1.402	RTR
cisco	Cisco IOS	7606-S	1.3.6.14.1.9.1.863	RTR
cisco	Cisco IOS	7609	1.3.6.14.1.9.1.509	RTR
cisco	Cisco IOS	7609(C6509SP)	1.3.6.14.1.9.1.310.ios	SWRT
cisco	Cisco IOS	7609(WS-C6509)	1.3.6.14.1.9.5.44.ios	SWRT
cisco	Cisco IOS	7609(WS-C6509-NEB-A)	1.3.6.14.1.9.1.534.ios	SWRT
cisco	Cisco IOS	7609-S	1.3.6.14.1.9.1.864	RTR
cisco	Cisco IOS	7609-S(866)	1.3.6.14.1.9.1.835	RTR
cisco	Cisco IOS	7613	1.3.6.14.1.9.1.528	RTR
cisco	Cisco IOS	7613(C6513)	1.3.6.14.1.9.5.50.ios	SWRT
cisco	Cisco IOS	7613(WS-C6503)	1.3.6.14.1.9.1.449.ios	SWRT
cisco	Cisco IOS	7613(WS-C6513)	1.3.6.14.1.9.1.400.ios	SWRT
cisco	Cisco IOS	801	1.3.6.14.1.9.1.212	RTR
cisco	Cisco IOS	802	1.3.6.14.1.9.1.213	RTR
cisco	Cisco IOS	803	1.3.6.14.1.9.1.214	RTR
cisco	Cisco IOS	804	1.3.6.14.1.9.1.215	RTR
cisco	Cisco IOS	805	1.3.6.14.1.9.1.245	RTR
cisco	Cisco IOS	806	1.3.6.14.1.9.1.384	RTR
cisco	Cisco IOS	811	1.3.6.14.1.9.1.395	RTR
cisco	Cisco IOS	813	1.3.6.14.1.9.1.396	RTR
cisco	Cisco IOS	819	1.3.6.14.1.9.1.1378	RTR
cisco	Cisco IOS	826	1.3.6.14.1.9.1.322	RTR
cisco	Cisco IOS	826-4U	1.3.6.14.1.9.1.321	RTR
cisco	Cisco IOS	827	1.3.6.14.1.9.1.284	RTR
cisco	Cisco IOS	827H	1.3.6.14.1.9.1.446	RTR
cisco	Cisco IOS	827_4V	1.3.6.14.1.9.1.270	RTR
cisco	Cisco IOS	828	1.3.6.14.1.9.1.382	RTR
cisco	Cisco IOS	831	1.3.6.14.1.9.1.497	RTR
cisco	Cisco IOS	836	1.3.6.14.1.9.1.499	RTR
cisco	Cisco IOS	837	1.3.6.14.1.9.1.495	RTR
cisco	Cisco IOS	851	1.3.6.14.1.9.1.566	RTR
cisco	Cisco IOS	8510CSR	1.3.6.14.1.9.1.190	Switch
cisco	Cisco IOS	8510MSR	1.3.6.14.1.9.1.230	Switch
cisco	Cisco IOS	8515CSR	1.3.6.14.1.9.1.196	Switch

cisco	Cisco IOS	8515MSR	1.3.6.14.1.9.1.231	Switch
cisco	Cisco IOS	8540CSR	1.3.6.14.1.9.1.203	Switch
cisco	Cisco IOS	8540MSR	1.3.6.14.1.9.1.202	Switch
cisco	Cisco IOS	857	1.3.6.14.1.9.1.567	RTR
cisco	Cisco IOS	860	1.3.6.14.1.9.1.869	RTR
cisco	Cisco IOS	861	1.3.6.14.1.9.1.834	RTR
cisco	Cisco IOS	867	1.3.6.14.1.9.1.836	RTR
cisco	Cisco IOS	871	1.3.6.14.1.9.1.571	RTR
cisco	Cisco IOS	876	1.3.6.14.1.9.1.568	RTR
cisco	Cisco IOS	877	1.3.6.14.1.9.1.569	RTR
cisco	Cisco IOS	878	1.3.6.14.1.9.1.570	RTR
cisco	Cisco IOS	881	1.3.6.14.1.9.1.837	RTR
cisco	Cisco IOS	886VA	1.3.6.14.1.9.1.1273	RTR
cisco	Cisco IOS	886VAM	1.3.6.14.1.9.1.1272	RTR
cisco	Cisco IOS	887VA	1.3.6.14.1.9.1.1274	RTR
cisco	Cisco IOS	887VA-SEC-K9	1.3.6.14.1.9.12.3.1.3.988	RTR
cisco	Cisco IOS	887VAM	1.3.6.14.1.9.1.1271	RTR
cisco	Cisco IOS	888	1.3.6.14.1.9.1.852	RTR
cisco	Cisco IOS	890Ap	1.3.6.14.1.9.1.871	RTR
cisco	Cisco IOS	891	1.3.6.14.1.9.1.857	RTR
cisco	Cisco IOS	892	1.3.6.14.1.9.1.858	RTR
cisco	Cisco IOS	A901-4C-F-D	1.3.6.14.1.9.1.1522	RTR
cisco	Cisco IOS	A901-4C-FT-D	1.3.6.14.1.9.1.1521	RTR
cisco	Cisco IOS	A903	1.3.6.14.1.9.1.1441	RTR
cisco	Cisco IOS	AON Module	1.3.6.14.1.9.1.755	BLDSVR
cisco	Cisco IOS	ASR 1001	1.3.6.14.1.9.1.1165	RTR
cisco	Cisco IOS	ASR 1002	1.3.6.14.1.9.1.923	RTR
cisco	Cisco IOS	ASR 1002 X	1.3.6.14.1.9.1.1525	RTR
cisco	Cisco IOS	ASR 1002-F	1.3.6.14.1.9.1.1116	RTR
cisco	Cisco IOS	ASR 1004	1.3.6.14.1.9.1.924	RTR
cisco	Cisco IOS	ASR 1006	1.3.6.14.1.9.1.925	RTR
cisco	Cisco IOS	ASR 1013	1.3.6.14.1.9.1.1166	RTR
cisco	Cisco IOS	C29408TF	1.3.6.14.1.9.1.542	Switch
cisco	Cisco IOS	C29408TT	1.3.6.14.1.9.1.540	Switch
cisco	Cisco IOS	C2970-24	1.3.6.14.1.9.1.527	Switch
cisco	Cisco IOS	C4510R	1.3.6.14.1.9.1.1287	Switch
cisco	Cisco IOS	CBS-3100	1.3.6.14.1.9.1.946	Switch

cisco	Cisco IOS	CBS-3110	1.3.6.1.4.1.9.1.947	Switch
cisco	Cisco IOS	CBS-3120	1.3.6.1.4.1.9.1.948	Switch
cisco	Cisco IOS	CBS-3130	1.3.6.1.4.1.9.1.949	Switch
cisco	Cisco IOS	CGR-2010/K9	1.3.6.1.4.1.9.1.1253	RTR
cisco	Cisco IOS	CSR1000V	1.3.6.1.4.1.9.1.1537	RTR
cisco	Cisco IOS	Cat6000	1.3.6.1.4.1.9.1.241	Switch
cisco	Cisco IOS	Express50012TC	1.3.6.1.4.1.9.1.727	Switch
cisco	Cisco IOS	Express50024LC	1.3.6.1.4.1.9.1.725	Switch
cisco	Cisco IOS	Express50024PC	1.3.6.1.4.1.9.1.726	Switch
cisco	Cisco IOS	Express50024TT	1.3.6.1.4.1.9.1.724	Switch
cisco	Cisco IOS	Firewall Module	1.3.6.1.4.1.9.1.674	BLDSVR
cisco	Cisco IOS	IAD2430-24FXS	1.3.6.1.4.1.9.1.545	RTR
cisco	Cisco IOS	IAD2431-16FXS	1.3.6.1.4.1.9.1.547	RTR
cisco	Cisco IOS	IAD2431-1T1E1	1.3.6.1.4.1.9.1.548	RTR
cisco	Cisco IOS	IAD2431-8FXS	1.3.6.1.4.1.9.1.546	RTR
cisco	Cisco IOS	IAD2432-24FXS	1.3.6.1.4.1.9.1.549	RTR
cisco	Cisco IOS	IAD2435-8FXS	1.3.6.1.4.1.9.1.962	RTR
cisco	Cisco IOS	IE-2000-16PTC-G-L	1.3.6.1.4.1.9.1.1729	Switch
cisco	Cisco IOS	IE-30004-TC	1.3.6.1.4.1.9.1.958	Switch
cisco	Cisco IOS	IE-30008-TC	1.3.6.1.4.1.9.1.959	Switch
cisco	Cisco IOS	IE-3010-16S-8PC	1.3.6.1.4.1.9.1.1319	Switch
cisco	Cisco IOS	IE-3010-24TC	1.3.6.1.4.1.9.1.1320	Switch
cisco	Cisco IOS	LS1010_DEVICE	1.3.6.1.4.1.9.1.107	Switch
cisco	Cisco IOS	LS1015_DEVICE	1.3.6.1.4.1.9.1.164	Switch
cisco	Cisco IOS	MSFC	1.3.6.1.4.1.9.1.258	Switch
cisco	Cisco IOS	MWR 2941-DC	1.3.6.1.4.1.9.1.1014	RTR
cisco	Cisco IOS	MWR 2941-DC-A	1.3.6.1.4.1.9.1.1215	RTR
cisco	Cisco IOS	MWR1941DC	1.3.6.1.4.1.9.1.520	RTR
cisco	Cisco IOS	OS-CIGESM-18TT-EBU	1.3.6.1.4.1.9.1.592	Switch
cisco	Cisco IOS	Pro4500	1.3.6.1.4.1.9.1.166	RTR
cisco	Cisco IOS	Pro4700	1.3.6.1.4.1.9.1.142	RTR
cisco	Cisco IOS	RSM	1.3.6.1.4.1.9.1.168	Switch
cisco	Cisco IOS	SM-ES3G-16P	1.3.6.1.4.1.9.1.1050	Switch
cisco	Cisco IOS	SSL Module	1.3.6.1.4.1.9.1.554	BLDSVR
cisco	Cisco IOS	Sup720 Module	1.3.6.1.4.1.9.1.557	BLDSVR
cisco	Cisco IOS	WS-C2960G-48TC-L	1.3.6.1.4.1.9.1.697	Switch
cisco	Cisco IOS	WS-C3560V2-24PS	1.3.6.1.4.1.9.1.1021	Switch

cisco	Cisco IOS	WS-C3560V2-24TS	1.3.6.14.1.9.1.1020	Switch
cisco	Cisco IOS	WS-C3560V2-24TS-SD	1.3.6.14.1.9.1.1019	Switch
cisco	Cisco IOS	WS-C3560V2-48PS	1.3.6.14.1.9.1.1025	Switch
cisco	Cisco IOS	WS-C3560V2-48TS	1.3.6.14.1.9.1.1024	Switch
cisco	Cisco IOS	WS-C4503-E	1.3.6.14.1.9.1.874	Switch
cisco	Cisco IOS	WS-C4506-E	1.3.6.14.1.9.1.875	Switch
cisco	Cisco IOS	WS-C4507R-E	1.3.6.14.1.9.1.876	Switch
cisco	Cisco IOS	WS-C4510R-E	1.3.6.14.1.9.1.877	Switch
cisco	Cisco IOS	WS-C4900M	1.3.6.14.1.9.1.917	Switch
cisco	Cisco IOS	WS-C4948E-10GE	1.3.6.14.1.9.1.1178	Switch
cisco	Cisco IOS	WS-C6504-E	1.3.6.14.1.9.1.657	Switch
cisco	Cisco IOS	WS-C6509-NEB-A	1.3.6.14.1.9.1.534.catos	SWRT
cisco	Cisco IOS	WS-C6509-VE	1.3.6.14.1.9.1.832.ios	SWRT
cisco	Cisco IOS	WS-C6509-VE(CatOS)	1.3.6.14.1.9.1.832.catos	SWRT
cisco	Cisco IOS	WS-CBS-3020-HPQ	1.3.6.14.1.9.1.748	Switch
cisco	Cisco IOS	WS-X6302-MSM	1.3.6.14.1.9.1.256	Switch
cisco	Cisco IOS	cat4500X32	1.3.6.14.1.9.1.1606	Switch
cisco	IOS-XR	12816(XR)	1.3.6.14.1.9.1.477	Switch
cisco	Cisco:IOS	CRS1-Fabric Router	1.3.6.14.1.9.1.613	Switch
cisco	Cisco MDS:	MDS 9509 Fibre Channel Switch	1.3.6.14.1.9.12.3.1.3.376	Switch
cisco	Cisco PIX/ASA	Cisco ASA 5585-X SSP-60	1.3.6.14.1.9.1.1197	Firewall
cisco	Cisco PIX Firewall 535sy Firewall	VPN Appliance	1.3.6.14.1.9.1.771	Firewall
cisco	Cisco LSSB: 24-Port 10	100 Managed Switch	1.3.6.14.1.9.6.1.82.24.1	Switch

Supported Device Models

Driver	OS	Model	SysObjectId	Type
DD3com	Comware	A7510	1.3.6.1.4.1.25506.11.1.6	RTR
DD3com	Comware	H3C S3100-EI	1.3.6.1.4.1.25506.1.200	RTR
DD3com	Comware	JD377A	1.3.6.1.4.1.25506.11.1.24	RTR
DD3com	Comware	MSR 50-40	1.3.6.1.4.1.25506.11.2.18	RTR
DD3com	Comware	MSR20-11	1.3.6.1.4.1.25506.1.230	RTR
DD3com	Comware	MSR20-12	1.3.6.1.4.1.25506.1.257	RTR
DD3com	Comware	MSR20-13	1.3.6.1.4.1.25506.1.231	RTR
DD3com	Comware	MSR20-15	1.3.6.1.4.1.25506.1.232	RTR
DD3com	Comware	MSR20-20	1.3.6.1.4.1.25506.1.70	RTR
DD3com	Comware	MSR20-21	1.3.6.1.4.1.25506.1.71	RTR
DD3com	Comware	MSR20-40	1.3.6.1.4.1.25506.1.72	RTR
DD3com	Comware	MSR30-10	1.3.6.1.4.1.25506.1.206	RTR
DD3com	Comware	MSR30-11	1.3.6.1.4.1.25506.1.221	RTR
DD3com	Comware	MSR30-16	1.3.6.1.4.1.25506.1.217	RTR
DD3com	Comware	MSR30-20	1.3.6.1.4.1.25506.1.73	RTR
DD3com	Comware	MSR30-40	1.3.6.1.4.1.25506.1.74	RTR
DD3com	Comware	MSR30-60	1.3.6.1.4.1.25506.1.75	RTR
DD3com	Comware	MSR50-60	1.3.6.1.4.1.25506.1.77	RTR
DD3com	Comware	MSR50-series	1.3.6.1.4.1.25506.1.76	RTR

Enterasys

Supported Device Models

Driver	OS	Model	SysObjectId	Type
enterasys	EOS	1H582-51	1.3.6.14.1.5624.2.1.34	Switch
enterasys	EOS	A2H124-24	1.3.6.14.1.5624.2.1.87	Switch
enterasys	EOS	B5G124-24	1.3.6.14.1.5624.2.1.134	Switch

Supported Device Models

Driver	OS	Model	SysObjectId	Type
extreme	N/A	Alpine 3802	1.3.6.14.1.1916.2.26	Switch
extreme	N/A	Alpine 3804	1.3.6.14.1.1916.2.20	Switch
extreme	N/A	Alpine 3808	1.3.6.14.1.1916.2.17	Switch
extreme	N/A	Black Diamond 10808	1.3.6.14.1.1916.2.56	Switch
extreme	N/A	Black Diamond 12804	1.3.6.14.1.1916.2.77	Switch
extreme	N/A	Black Diamond 6800	1.3.6.14.1.1916.2.8	Switch
extreme	N/A	Black Diamond 6804	1.3.6.14.1.1916.2.27	Switch
extreme	N/A	Black Diamond 6808	1.3.6.14.1.1916.2.11	Switch
extreme	N/A	Black Diamond 6816	1.3.6.14.1.1916.2.24	Switch
extreme	N/A	Black Diamond 8800	1.3.6.14.1.1916.2.74	Switch
extreme	N/A	Black Diamond 8810	1.3.6.14.1.1916.2.62	Switch
extreme	N/A	Summit 1	1.3.6.14.1.1916.2.1	Switch
extreme	N/A	Summit 1iSX	1.3.6.14.1.1916.2.19	Switch
extreme	N/A	Summit 1iTX	1.3.6.14.1.1916.2.14	Switch
extreme	N/A	Summit 2	1.3.6.14.1.1916.2.2	Switch
extreme	N/A	Summit 200-24	1.3.6.14.1.1916.2.53	Switch
extreme	N/A	Summit 200-24fx	1.3.6.14.1.1916.2.70	Switch
extreme	N/A	Summit 200-48	1.3.6.14.1.1916.2.54	Switch
extreme	N/A	Summit 24	1.3.6.14.1.1916.2.7	Switch
extreme	N/A	Summit 24e2SX	1.3.6.14.1.1916.2.41	Switch
extreme	N/A	Summit 24e2TX	1.3.6.14.1.1916.2.40	Switch
extreme	N/A	Summit 24e3	1.3.6.14.1.1916.2.25	Switch
extreme	N/A	Summit 3	1.3.6.14.1.1916.2.3	Switch
extreme	N/A	Summit 300-24	1.3.6.14.1.1916.2.61	Switch
extreme	N/A	Summit 300-48	1.3.6.14.1.1916.2.55	Switch
extreme	N/A	Summit 4	1.3.6.14.1.1916.2.4	Switch
extreme	N/A	Summit 400-24p	1.3.6.14.1.1916.2.67	Switch
extreme	N/A	Summit 400-24ta	1.3.6.14.1.1916.2.63	Switch
extreme	N/A	Summit 400-24tb	1.3.6.14.1.1916.2.64	Switch
extreme	N/A	Summit 400-24x	1.3.6.14.1.1916.2.59	Switch
extreme	N/A	Summit 400-48t	1.3.6.14.1.1916.2.58	Switch
extreme	N/A	Summit 450a-24t	1.3.6.14.1.1916.2.71	Switch
extreme	N/A	Summit 48	1.3.6.14.1.1916.2.6	Switch
extreme	N/A	Summit 48i	1.3.6.14.1.1916.2.16	Switch
extreme	N/A	Summit 48si	1.3.6.14.1.1916.2.28	Switch
extreme	N/A	Summit 4fx	1.3.6.14.1.1916.2.5	Switch
extreme	N/A	Summit 5i	1.3.6.14.1.1916.2.15	Switch
extreme	N/A	Summit 5iLX	1.3.6.14.1.1916.2.21	Switch
extreme	N/A	Summit 5iTX	1.3.6.14.1.1916.2.22	Switch

extreme	N/A	Summit 7iSX	1.3.6.1.4.1.1916.2.12	Switch
extreme	N/A	Summit 7iTX	1.3.6.1.4.1.1916.2.13	Switch
extreme	N/A	Summit Px1	1.3.6.1.4.1.1916.2.30	Switch
extreme	N/A	Summit WM 100	1.3.6.1.4.1.1916.2.68	Switch
extreme	N/A	Summit WM 1000	1.3.6.1.4.1.1916.2.69	Switch
extreme	N/A	SummitX 450-24t	1.3.6.1.4.1.1916.2.66	Switch
extreme	N/A	SummitX 450-24x	1.3.6.1.4.1.1916.2.65	Switch
extreme	N/A	SummitX 450a-24t	1.3.6.1.4.1.1916.2.81	Switch
extreme	N/A	SummitX 450a-24tDC	1.3.6.1.4.1.1916.2.80	Switch
extreme	N/A	SummitX 450a-24x	1.3.6.1.4.1.1916.2.84	Switch
extreme	N/A	SummitX 450a-24xDC	1.3.6.1.4.1.1916.2.82	Switch
extreme	N/A	SummitX 450a-48t	1.3.6.1.4.1.1916.2.76	Switch
extreme	N/A	SummitX 450e-24p	1.3.6.1.4.1.1916.2.72	Switch
extreme	N/A	SummitX 450e-48p	1.3.6.1.4.1.1916.2.79	Switch

HP ProCurve Device Driver Report

Supported OS Versions

Description	About Box Display
0.2.x	02..x
0.3.x	03..x
0.5.x	0.5.x
0.6.x	0.6.x
07.x	07.x
08.x	08.x
09.x	09.x
1.0.x	1.0.x
10.x	10.x
11.x	11.x
12.0.x	12.0.x
13.x	13.x
14.x	14.x
15.x	15.x

Supported Device Models

Driver	OS	Model	SysObjectId	Type
procurve	HP ProCurve	A6713A Network Blade	1.3.6.14.1.11.2.3.7.11.24	Switch
procurve	HP ProCurve	A6716A Network Blade	1.3.6.14.1.11.2.3.7.11.25	Switch
procurve	HP ProCurve	A6717A Network Blade	1.3.6.14.1.11.2.3.7.11.26	Switch
procurve	HP ProCurve	HP J3177A AdvanceStack Switch 224T	1.3.6.14.1.11.2.3.7.11.4.3	Switch
procurve	HP ProCurve	HP J3177A AdvanceStack Switch 224VG	1.3.6.14.1.11.2.3.7.11.4.4	Switch
procurve	HP ProCurve	HP J3299A Switch 224M	1.3.6.14.1.11.2.3.7.11.6	Switch
procurve	HP ProCurve	HP J4110A Switch 8000M	1.3.6.14.1.11.2.3.7.11.7	Switch
procurve	HP ProCurve	J3100A AdvanceStack Switch 2000	1.3.6.14.1.11.2.3.7.11.1	Switch
procurve	HP ProCurve	J3100A AdvanceStack Switch 2000B	1.3.6.14.1.11.2.3.7.11.2	Switch
procurve	HP ProCurve	J3175A AdvanceStack Switch 208T	1.3.6.14.1.11.2.3.7.11.4.1	Switch
procurve	HP ProCurve	J3175A AdvanceStack Switch 208VG	1.3.6.14.1.11.2.3.7.11.4.2	Switch
procurve	HP ProCurve	J3175A Switch 200 8/24	1.3.6.14.1.11.2.3.7.11.4	Switch
procurve	HP ProCurve	J3245A AdvanceStack Switch 800T	1.3.6.14.1.11.2.3.7.11.3	Switch
procurve	HP ProCurve	J3298A Switch 212M	1.3.6.14.1.11.2.3.7.11.5	Switch
procurve	HP ProCurve	J4120A Switch 1600M	1.3.6.14.1.11.2.3.7.11.8	Switch
procurve	HP ProCurve	J4121A Switch 4000M	1.3.6.14.1.11.2.3.7.11.9	Switch

procurve	HP ProCurve	J4122A Switch 2400M	1.3.6.1.4.1.11.2.3.7.11.10	Switch
procurve	HP ProCurve	J4122B Switch 2424M	1.3.6.1.4.1.11.2.3.7.11.11	Switch
procurve	HP ProCurve	J4138A Routing Switch 9308M	1.3.6.1.4.1.11.2.3.7.11.13	Switch
procurve	HP ProCurve	J4139A Routing Switch 9304M	1.3.6.1.4.1.11.2.3.7.11.14	Switch
procurve	HP ProCurve	J4812A Switch 2512	1.3.6.1.4.1.11.2.3.7.11.18	Switch
procurve	HP ProCurve	J4813A Switch 2524	1.3.6.1.4.1.11.2.3.7.11.19	Switch
procurve	HP ProCurve	J4819A Switch 3124	1.3.6.1.4.1.11.2.3.7.11.22	Switch
procurve	HP ProCurve	J4819A Switch 3324XL	1.3.6.1.4.1.11.2.3.7.11.21	Switch
procurve	HP ProCurve	J4819A Switch 5308XL	1.3.6.1.4.1.11.2.3.7.11.17	Switch
procurve	HP ProCurve	J4840A Routing Switch 6308M	1.3.6.1.4.1.11.2.3.7.11.15	Switch
procurve	HP ProCurve	J4841A Switch 6208M	1.3.6.1.4.1.11.2.3.7.11.16	Switch
procurve	HP ProCurve	J4860A Switch 5304XL	1.3.6.1.4.1.11.2.3.7.11.20	Switch
procurve	HP ProCurve	J4865A Switch 4108GL	1.3.6.1.4.1.11.2.3.7.11.23	Switch
procurve	HP ProCurve	J4874A Routing Switch 6410CL	1.3.6.1.4.1.11.2.3.7.11.28	Switch
procurve	HP ProCurve	J4887A Switch 4104GL	1.3.6.1.4.1.11.2.3.7.11.27	Switch
procurve	HP ProCurve	J4899A Switch 2650	1.3.6.1.4.1.11.2.3.7.11.29	Switch
procurve	HP ProCurve	J4899B Switch 2650-CR	1.3.6.1.4.1.11.2.3.7.11.44	Switch
procurve	HP ProCurve	J4899C Switch 2650	1.3.6.1.4.1.11.2.3.7.11.83	Switch
procurve	HP ProCurve	J4900A Switch 2626	1.3.6.1.4.1.11.2.3.7.11.34	Switch
procurve	HP ProCurve	J4900B Switch 2626-CR	1.3.6.1.4.1.11.2.3.7.11.45	Switch
procurve	HP ProCurve	J4900C Switch 2626C	1.3.6.1.4.1.11.2.3.7.11.82	Switch
procurve	HP ProCurve	J4902A Switch 6108	1.3.6.1.4.1.11.2.3.7.11.30	Switch
procurve	HP ProCurve	J4903A Switch 2824	1.3.6.1.4.1.11.2.3.7.11.31	Switch
procurve	HP ProCurve	J4904A Switch 2848	1.3.6.1.4.1.11.2.3.7.11.32	Switch
procurve	HP ProCurve	J4905A Switch 3400cl-24G	1.3.6.1.4.1.11.2.3.7.11.42	Switch
procurve	HP ProCurve	J4906A Switch 3400cl-48G	1.3.6.1.4.1.11.2.3.7.11.43	Switch
procurve	HP ProCurve	J8130A Wireless Access Point AP420WL	1.3.6.1.4.1.11.2.3.7.11.37	Switch
procurve	HP ProCurve	J8133A Wireless Access Point AP520WL	1.3.6.1.4.1.11.2.3.7.11.38	Switch
procurve	HP ProCurve	J8153A Access Controller 720WL	1.3.6.1.4.1.11.2.3.7.11.39	Switch
procurve	HP ProCurve	J8154A Access Controller Server 740WL	1.3.6.1.4.1.11.2.3.7.11.40	Switch
procurve	HP ProCurve	J8155A Integrated Access Manager 760WL	1.3.6.1.4.1.11.2.3.7.11.41	Switch
procurve	HP ProCurve	J8164A Switch 2626-PWR	1.3.6.1.4.1.11.2.3.7.11.36	Switch
procurve	HP ProCurve	J8165A Switch 2650-PWR	1.3.6.1.4.1.11.2.3.7.11.35	Switch
procurve	HP ProCurve	J8433A Switch 6400cl-6XG	1.3.6.1.4.1.11.2.3.7.11.48	Switch
procurve	HP ProCurve	J8474A Switch 6410cl-6XG	1.3.6.1.4.1.11.2.3.7.11.49	Switch
procurve	HP ProCurve	J8680A Router 9608sl	1.3.6.1.4.1.11.2.3.7.11.54	Switch
procurve	HP ProCurve	J8692A Switch 3500yl-24G-PWR	1.3.6.1.4.1.11.2.3.7.11.58	Switch
procurve	HP ProCurve	J8693A Switch 3500yl-48G-PWR	1.3.6.1.4.1.11.2.3.7.11.59	Switch
procurve	HP ProCurve	J8697A Switch 5406zl	1.3.6.1.4.1.11.2.3.7.11.50	Switch
procurve	HP ProCurve	J8698A Switch 5412zl	1.3.6.1.4.1.11.2.3.7.11.51	Switch
procurve	HP ProCurve	J8718A Switch 5404yl	1.3.6.1.4.1.11.2.3.7.11.46	Switch
procurve	HP ProCurve	J8719A Switch 5408yl	1.3.6.1.4.1.11.2.3.7.11.47	Switch
procurve	HP ProCurve	J8752A Router 7102dl	1.3.6.1.4.1.11.2.14.11.71.2	Switch
procurve	HP ProCurve	J8753A Router 7203dl	1.3.6.1.4.1.11.2.14.11.71.3	Switch

procurve	HP ProCurve	J8762A Switch 2600-8-PWR	1.3.6.14.1.11.2.3.7.11.55	Switch
procurve	HP ProCurve	J8770A Switch 4204vl	1.3.6.14.1.11.2.3.7.11.52	Switch
procurve	HP ProCurve	J8771A Switch 4202vl-48G	1.3.6.14.1.11.2.3.7.11.56	Switch
procurve	HP ProCurve	J8772A Switch 4202vl-72	1.3.6.14.1.11.2.3.7.11.57	Switch
procurve	HP ProCurve	J8773A Switch 4208vl	1.3.6.14.1.11.2.3.7.11.53	Switch
procurve	HP ProCurve	J8992A Switch 6200yl-24G	1.3.6.14.1.11.2.3.7.11.60	Switch
procurve	HP ProCurve	J9019A Switch 2510-24A	1.3.6.14.1.11.2.3.7.11.61	Switch
procurve	HP ProCurve	J9019B Switch 2510-24	1.3.6.14.1.11.2.3.7.11.90	Switch
procurve	HP ProCurve	J9020A Switch 2510-48A	1.3.6.14.1.11.2.3.7.11.62	Switch
procurve	HP ProCurve	J9021A Switch 2810-24G	1.3.6.14.1.11.2.3.7.11.63	Switch
procurve	HP ProCurve	J9022A Switch 2810-48G	1.3.6.14.1.11.2.3.7.11.64	Switch
procurve	HP ProCurve	J9028A Switch 1800-24G	1.3.6.14.1.11.2.3.7.11.65	Switch
procurve	HP ProCurve	J9029A Switch 1800-8G	1.3.6.14.1.11.2.3.7.11.66	Switch
procurve	HP ProCurve	J9031A Switch 4202vl-68	1.3.6.14.1.11.2.3.7.11.71	Switch
procurve	HP ProCurve	J9032A Switch 4202vl-68G	1.3.6.14.1.11.2.3.7.11.70	Switch
procurve	HP ProCurve	J9038A Switch	1.3.6.14.1.11.2.3.7.11.67	Switch
procurve	HP ProCurve	J9049A Switch 2900-24G	1.3.6.14.1.11.2.3.7.11.69	Switch
procurve	HP ProCurve	J9050A Switch 2900-48G	1.3.6.14.1.11.2.3.7.11.68	Switch
procurve	HP ProCurve	J9085A Switch 2610-24	1.3.6.14.1.11.2.3.7.11.76	Switch
procurve	HP ProCurve	J9086A Switch 2610-24/12-PWR	1.3.6.14.1.11.2.3.7.11.80	Switch
procurve	HP ProCurve	J9088A Switch 2610-48	1.3.6.14.1.11.2.3.7.11.77	Switch
procurve	HP ProCurve	J9089A Switch 2610-48-PWR	1.3.6.14.1.11.2.3.7.11.79	Switch
procurve	HP ProCurve	J9091A Switch 8212zl	1.3.6.14.1.11.2.3.7.11.72	Switch
procurve	HP ProCurve	J9138A Switch 2520G-8-PoE	1.3.6.14.1.11.2.3.7.11.95	Switch
procurve	HP ProCurve	J9145A Switch 2910al-24G	1.3.6.14.1.11.2.3.7.11.86	Switch
procurve	HP ProCurve	J9299A Switch 2520G-24-POE	1.3.6.14.1.11.2.3.7.11.97	Switch
procurve	HP ProCurve	J9310A Switch 3500yl-24G-PoE	1.3.6.14.1.11.2.3.7.11.114	Switch
procurve	HP ProCurve	J9311A Switch 3500yl-48G-PoE	1.3.6.14.1.11.2.3.7.11.115	Switch
procurve	HP ProCurve	J9470A Switch 3500-24	1.3.6.14.1.11.2.3.7.11.111	Switch
procurve	HP ProCurve	J9471A Switch 3500-24-PoE	1.3.6.14.1.11.2.3.7.11.109	Switch
procurve	HP ProCurve	J9477A Switch 8206zl	1.3.6.14.1.11.2.3.7.11.113	Switch
procurve	HP ProCurve	J9623A Switch E2620-24	1.3.6.14.1.11.2.3.7.11.129	Switch
procurve	HP ProCurve	J9727A Switch 2520G-24-PoE	1.3.6.14.1.11.2.3.7.11.153	Switch
procurve	HP ProCurve	J9774A Switch 2530G-24-PoE	1.3.6.14.1.11.2.3.7.11.138	Switch
procurve	HP ProCurve	Proliant Series Switches	1.3.6.14.1.11.2.3.7.11.33	Switch

Extreme Networks

Juniper JUNOS Series Device Driver Report

Supported OS Versions

Description	About Box Display
5.5.x	5.5R1.x/2.x/3.x/4.x
5.6.x	5.6R1.x/2.x/3.x/4.x
5.7.x	5.7R2.x
6.0.x	6.0R1.x/2.x/3.x
6.1.x	6.1R1.x/2.x/3.x/4.x
6.2.x	6.2R1.x/2.x/3.x
6.3.x	6.3R1.x/2.x/3.x/4.x
6.4.x	6.4R1.x/2.x/3.x
7.0.x	7.0R1.x/2.x
7.1.x	7.1R1.x
7.2.x	7.2R1.x
7.3.x	7.3R1.x
7.4.x	7.4R1.x
7.5.x	7.5R1.x
7.6.x	7.6R1.x/2.x
8.0.x	8.0R1.x/2.x
8.1.x	8.1R1.x/2.x
8.2.x	8.2R1.x/2.x
8.3.x	8.3R1.x/2.x
8.4.x	8.4R1.x/2.x
8.5.x	8.5R1.x
9.0.x	9.0R1.x/2.x
9.1.x	9.1R1.x/2.x
9.2.x	9.2R1.x/2.x
9.3.x	9.3R1.x/2.x/3.x/4.x
9.4.x	9.4R1.x/2.x
9.5.x	9.5R1.x/2.x

9.6.x	9.6R1.x/2.x
10.0.x	10.0R1.x
10.1.x	10.1R1.x/2.x
10.2.x	10.2R1.x
10.3.x	10.3R1.x
10.4.x	10.4R1.x/2.x/3.x/4.x
11.1.x	11.1R1.x/2.x
11.2.x	11.2R1.x
11.3.x	11.3R1.x
11.4.x	11.4R1.x/2.x/3.x/4.x/5.x/6.x
12.1.x	12.1R1.x
12.2.x	12.2R.x
12.3.x	12.3R.x

Supported Device Models

Driver	OS	Model	SysObjectId	Type
juniper	JUNOS	EX2200 Ethernet Switch	1.3.6.14.1.2636.1.1.1.2.43	SWRT
juniper	JUNOS	EX3200 Ethernet Switch	1.3.6.14.1.2636.1.1.1.2.30	SWRT
juniper	JUNOS	EX3300 Ethernet Switch	1.3.6.14.1.2636.1.1.1.2.76	SWRT
juniper	JUNOS	EX4200 Ethernet Switch	1.3.6.14.1.2636.1.1.1.2.31	SWRT
juniper	JUNOS	EX4500 Ethernet Switch	1.3.6.14.1.2636.1.1.1.2.44	SWRT
juniper	JUNOS	EX6210 Ethernet Switch	1.3.6.14.1.2636.1.1.1.2.74	SWRT
juniper	JUNOS	EX8208 Ethernet Switch	1.3.6.14.1.2636.1.1.1.2.32	SWRT
juniper	JUNOS	EX8216 Ethernet Switch	1.3.6.14.1.2636.1.1.1.2.33	SWRT
juniper	JUNOS	FireFly_SRX	1.3.6.14.1.2636.1.1.1.2.96	Firewall
juniper	JUNOS	IP/MPLS Router Module	1.3.6.14.1.2636.1.1.1.2.16	RTR
juniper	JUNOS	J2300 Edge Router	1.3.6.14.1.2636.1.1.1.2.13	RTR
juniper	JUNOS	J2320 Edge Router	1.3.6.14.1.2636.1.1.1.2.23	RTR
juniper	JUNOS	J2350 Edge Router	1.3.6.14.1.2636.1.1.1.2.24	RTR
juniper	JUNOS	J4300 Edge Router	1.3.6.14.1.2636.1.1.1.2.14	RTR
juniper	JUNOS	J4320 Router	1.3.6.14.1.2636.1.1.1.2.22	RTR
juniper	JUNOS	M120 Router	1.3.6.14.1.2636.1.1.1.2.18	RTR
juniper	JUNOS	M160 Core Router	1.3.6.14.1.2636.1.1.1.2.3	RTR
juniper	JUNOS	M20 Core/Edge Router	1.3.6.14.1.2636.1.1.1.2.2	RTR
juniper	JUNOS	M320 Core Router	1.3.6.14.1.2636.1.1.1.2.9	RTR
juniper	JUNOS	M40 Core Router	1.3.6.14.1.2636.1.1.1.2.1	RTR
juniper	JUNOS	M40e Core/Edge Router	1.3.6.14.1.2636.1.1.1.2.8	RTR
juniper	JUNOS	M5 Core/Edge Router	1.3.6.14.1.2636.1.1.1.2.5	RTR

juniper	JUNOS	M7i Edge Router	1.3.6.14.1.2636.1.1.1.2.10	RTR
juniper	JUNOS	MX240 Router	1.3.6.14.1.2636.1.1.1.2.29	RTR
juniper	JUNOS	MX480 Router	1.3.6.14.1.2636.1.1.1.2.25	RTR
juniper	JUNOS	MX80 Router	1.3.6.14.1.2636.1.1.1.2.57	RTR
juniper	JUNOS	MX960 Router	1.3.6.14.1.2636.1.1.1.2.21	RTR
juniper	JUNOS	QFX3500	1.3.6.14.1.2636.1.1.1.4.82.1	SWRT
juniper	JUNOS	SRX 100 Service Gateway	1.3.6.14.1.2636.1.1.1.2.41	SWRT
juniper	JUNOS	SRX 1400 Service Gateway	1.3.6.14.1.2636.1.1.1.2.49	SWRT
juniper	JUNOS	SRX 210 Service Gateway	1.3.6.14.1.2636.1.1.1.2.36	SWRT
juniper	JUNOS	SRX 220 Service Gateway	1.3.6.14.1.2636.1.1.1.2.58	SWRT
juniper	JUNOS	SRX 240 Service Gateway	1.3.6.14.1.2636.1.1.1.2.39	SWRT
juniper	JUNOS	SRX 3400 Service Gateway	1.3.6.14.1.2636.1.1.1.2.35	SWRT
juniper	JUNOS	SRX 3600 Service Gateway	1.3.6.14.1.2636.1.1.1.2.34	SWRT
juniper	JUNOS	SRX 5600 Service Gateway	1.3.6.14.1.2636.1.1.1.2.28	SWRT
juniper	JUNOS	SRX 5800 Service Gateway	1.3.6.14.1.2636.1.1.1.2.26	SWRT
juniper	JUNOS	SRX 650 Service Gateway	1.3.6.14.1.2636.1.1.1.2.40	SWRT
juniper	JUNOS	T1600 Core Router	1.3.6.14.1.2636.1.1.1.2.27	RTR
juniper	JUNOS	T320 Core Router	1.3.6.14.1.2636.1.1.1.2.7	RTR
juniper	JUNOS	T640 Core Router	1.3.6.14.1.2636.1.1.1.2.6	RTR
juniper	JUNOS	Tx Matrix	1.3.6.14.1.2636.1.1.1.2.17	RTR
juniper	JUNOS	Tx MatrixPlus	1.3.6.14.1.2636.1.1.1.2.37	RTR
juniper	JUNOS	VMX	1.3.6.14.1.2636.1.1.1.2.108	RTR
juniper	JUNOS	Extreme: Alpine 3808	1.3.6.14.1.1916.2.17	switch
juniper	JUNOS	Extreme: Black Diamond 12804	1.3.6.14.1.1916.2.77	switch
juniper	JUNOS	Extreme: Summit 1iSX Switch.	1.3.6.14.1.1916.2.19	switch

WBEM Report

Supported Device Models

Driver	OS	Model	SysObjectId	Type
ddcumulus	Cumulus	cumulus	1.3.6.14.1.40310	Switch
WBEM	N/A	RHEL	1.3.6.14.1.3477.WBEM.RHEL	SVR
WBEM	N/A	SUSE	1.3.6.14.1.3477.WBEM.SUSE	SVR
WBEM	N/A	VMWARE	1.3.6.14.1.3477.WBEM.VMWARE	SVR
WBEM	N/A	VMWARE HOST	1.3.6.14.1.3477.WBEM.VMWARE.VHOST	SVR

Learn more at Dell.com/OMNM

© 2015 Dell Inc. All rights reserved. Dell Networks, E-Series are registered trademarks and, C-Series, Dell Networking OS9, Z-Series and S-Series, are trademarks of Dell, Inc. All other company names are trademarks of their respective holders. Information in this document is subject to change without notice. Dell Inc. assumes no responsibility for any errors that may appear in this document.

FY17Q2_560_Dell_OMNM_6.2_3rd_Party_Device_&_OS_Support_List_061416

