

Cisco MDS 9124e Fabric Switch for HP c-Class BladeSystem

user guide

Part number: AA-RWEBA-TE
Second edition: September 2007



Legal and notice information

© Copyright 2007 Hewlett-Packard Development Company, L.P

© Copyright 2007 Cisco Systems Inc.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Microsoft, Windows, and Windows XP are U.S. registered trademarks of Microsoft Corporation.

UNIX is a registered trademark of The Open Group.

Contents

About this guide	7
Intended audience	7
Related documentation	7
Contacting HP Technical Support	7
HP contact information	7
Document conventions and symbols	8
Subscription service	9
Other HP web sites	9
1 Overview	11
Switch features	11
Component identification	12
Port side of the Switch	13
Internal ports summary	13
Switch redundancy	13
Switch licensing	14
PortChannel	14
Optional hardware kits	15
2 Setup	17
Shipping carton contents	17
Installation and safety considerations	18
Installing multiple switches	18
Electrical considerations	18
Environmental considerations	18
Installing the Switch	18
OA power verification	20
Checking LEDs	21
Setting the IP address	21
Resetting the IP Address	22
Configuring the Switch	23
Items Required for Configuration	23
Connecting to the Command Line Interface	23
Setting the date and time	24
Verifying Installed Licenses	24
Modifying the FC domain ID (optional).	25
On Demand Ports	25
Disabling and enabling a port.	25
Verifying the configuration	26
Backing up the configuration.	26
Recovering the Admin Password.	26

3 Managing the Switch	29
Management features	29
Maintaining the Switch	30
Installing dust covers in empty ports	30
Replacing an SFP transceiver	30
Replacing the Switch	31
Powering on and off	32
Interpreting LED activity	33
LED indicators	33
LED patterns	34
POST and boot specifications	34
POST	34
Boot	35
Interpreting POST results	35
A Regulatory compliance and safety	37
Regulatory compliance	37
Federal Communications Commission notice for Class A equipment.	37
Declaration of conformity for products marked with the FCC logo, United States only.	37
Modifications	37
Cables	37
Regulatory compliance identification numbers	38
Laser device.	38
Laser safety warning	38
Certification and classification information	38
Laser product label	38
International notices and statements	39
Canadian notice (avis Canadien)	39
European Union notice	39
BSMI notice	40
Japanese notice.	40
Korean notices	40
Safety	41
Battery replacement notice	41
Taiwan battery recycling notice	41
Japanese power cord statement.	42
Waste Electrical and Electronic Equipment directive	42
English notice	42
B Electrostatic discharge.	51
How to prevent electrostatic discharge	51
Grounding methods	51
C Switch technical specifications.	53
General specifications.	53
Weight and physical dimensions	54
Environmental requirements	55

Supported SFPs	55
Supported HBAs	55
Glossary	57

About this guide

This guide provides information about setting up and configuring the Cisco MDS 9124e Fabric Switch for HP c-Class BladeSystem. Throughout this guide the short product name is used, Cisco MDS 9124e Switch.

Intended audience

This guide is intended for system administrators and technicians with knowledge of:

- Configuration aspects of customer Storage Area Network (SAN) fabric
- Customer host environment, such as Microsoft Windows or Linux
- Command Line Interface (CLI) commands
- Cisco Fabric Manager graphical user interface (GUI) for configuring the switches through a supported web browser

Related documentation

IMPORTANT:

For late breaking, supplemental information, access the latest version of the product release notes.

Contacting HP Technical Support

Be sure to have the following information available before you call HP:

- Technical support registration number (if applicable)
- Product serial number
- Product model name and number
- Applicable error messages
- Third-party hardware or software
- Operating system type and revision level

For continuous quality improvement, calls may be recorded or monitored.

HP contact information

For the name of the nearest HP authorized reseller:

- In the United States, see the HP US service locator web page:
http://www.hp.com/service_locator
- In other locations, see the Contact HP worldwide (in English) web page:
<http://welcome.hp.com/country/us/en/wwcontact.html>

- In the United States, for contact options see the Contact HP United States web page:
http://welcome.hp.com/country/us/en/contact_us.html
- Call 1-800-HP-INVENT (1-800-474-6836). This service is available 24 hours a day, 7 days a week. For continuous quality improvement, calls may be recorded or monitored.
- If you have purchased a Care Pack (service upgrade), call 1-800-633-3600. For more information about Care Packs, refer to the HP web site:
<http://www.hp.com>

Document conventions and symbols

Table 1 Document conventions

Convention	Element
Medium blue text: Figure 1	Cross-reference links and e-mail addresses
Medium blue, underlined text (http://www.hp.com)	Web site addresses
Bold font	Key names Text typed into a GUI element, such as into a box GUI elements that are clicked or selected, such as menu and list items, buttons, and check boxes
<i>Italics font</i>	Text emphasis
Monospace font	File and directory names System output Code Text typed at the command-line
<i>Monospace, italic font</i>	Code variables Command-line variables
Monospace, bold font	Emphasis of file and directory names, system output, code, and text typed at the command line

WARNING!


Indicates that failure to follow directions could result in bodily harm or death.

CAUTION:

Indicates that failure to follow directions could result in damage to equipment or data.

 **IMPORTANT:**
Provides clarifying information or specific instructions.

 **NOTE:**
Provides additional information.

 **TIP:**
Provides helpful hints and shortcuts.

Subscription service

HP strongly recommends that customers register online using the Subscriber's choice web site:

<http://www.hp.com/go/e-updates>.

Subscribing to this service provides you with e-mail updates on the latest product enhancements, newest driver versions, and firmware documentation updates as well as instant access to numerous other product resources.

After subscribing, locate your products by selecting **Business Support** and then **Storage** under Product Category.

Other HP web sites

For additional information, see the following HP web sites:

- <http://www.hp.com>
- <http://www.hp.com/go/storage>
- http://www.hp.com/service_locator
- <http://www.docs.hp.com>
- <http://welcome.hp.com/country/us/en/prodserv/servers.html>

1 Overview

The Cisco MDS 9124e Fabric Switch for HP c-Class BladeSystem (referred to hereafter as the Cisco MDS 9124e Fabric Switch) is a Fibre Channel (FC) switch that supports link speeds of up to 4 Gb. The Cisco MDS 9124e Fabric Switch can operate in a fabric containing multiple switches or as the only switch in a fabric.

This chapter provides the following information:

- [Switch features](#)
- [Component identification](#)
- [PortChannel](#)
- [Optional hardware kits](#)

Switch features

The Cisco MDS 9124e Fabric Switch provides the following features:

- Fully integrated, embedded FC SAN design that connects directly to the HP c-Class BladeSystem enclosure midplane
- On-Demand Port Activation Licensing enables you to additional 12-port license
- Easy to manage HP Storage Essentials and HP Systems Insight Manager support
- Full compatibility with HP C-Series switches
- Sixteen internal 1/2/4 Gbps auto-sensing FC interconnect technology with the following characteristics:
 - Independent automatic negotiation to the highest common speed for each server FC port connected to the switch
 - Universal self-configuring ports, which are capable of becoming F_Ports (fabric enabled)
- Eight external 1/2/4 Gbps FC Small Form-factor Pluggable (SFP) ports, with the following characteristics:
 - Automatic negotiation to the highest common speed of all devices connected to the port
 - Port interface-compatible SFP transceivers, including short wavelength (SWL), medium wavelength (MWL) and long wavelength (LWL)
 - Universal self-configuring ports, which are capable of becoming F_Ports (fabric enabled), FL_Ports (fabric loop enabled), E_Ports (expansion ports), TE_Ports (trunking expansion ports), FX_Ports, or SD_Ports

- Heterogeneous support for mixed storage fabrics
- Power supplied and controlled by the BladeSystem enclosure
- Identification to HP chassis management via HP specified SEEPROMs
- Hot-swap capability
- Compatible with redundant and dual redundant switch configurations in c-Class BladeSystem
- Hot code activation
- Real-time clock
- SFP port monitoring

Component identification

Figure 1 and Table 2 identify the physical components of the Cisco MDS 9124e Fabric Switch.

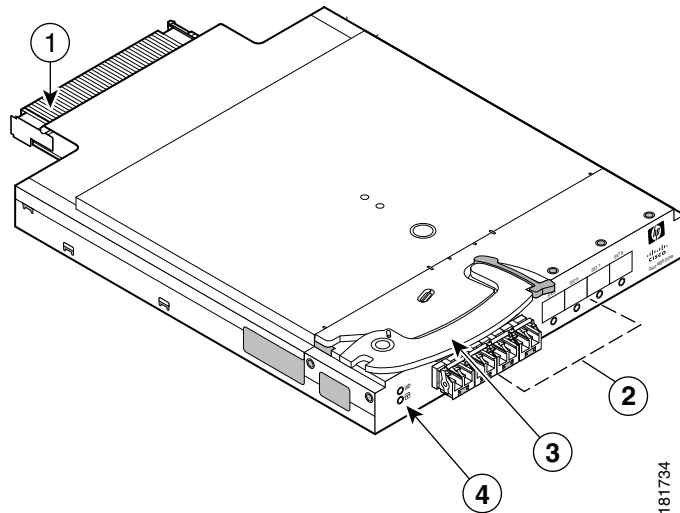


Figure 1 Identifying components

Table 2 Cisco MDS 9124e Fabric Switch components

Item	Description
1	Midplane connector
2	Eight external SFP ports
3	Installation handle
4	Unit ID (UID) and Health LEDs

Port side of the Switch

Figure 2 and Table 3 identify Cisco MDS 9124e Fabric Switch external ports (ports EXT 1 through EXT 4 and ports EXT 5 through EXT 8).

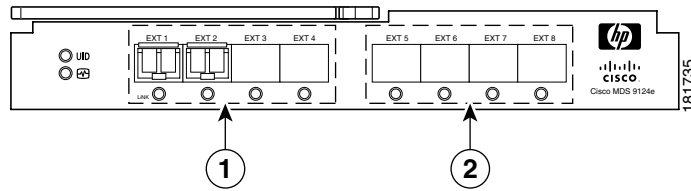


Figure 2 Cisco MDS 9124e Fabric Switch external ports

Table 3 Identifying Cisco MDS 9124e Fabric Switch external ports

Item	Description
1	Left bank — EXT 1, EXT 2, EXT 3 and EXT 4
2	Right bank — EXT 5, EXT 6, EXT 7 and EXT 8



NOTE:

Refer to [Interpreting LED activity](#) for complete information on switch LEDs.

Internal ports summary

Sixteen logical internal ports (numbered 1 through 16) connect sequentially to server bays 1 through 16 via the enclosure midplane. Server bay 1 is connected to Switch Port 1, Server bay 2 is connected to Switch port 2, and so forth.

Switch redundancy

The HP c-Class BladeSystem was engineered as a no-single-point-of-failure bladed solution. Attributes that contribute to switch redundancy include:

- Redundant power and cooling
- Redundant HP Onboard Administrator (OA) to ensure management access to the switch



NOTE:

The HP Onboard Administrator is the enclosure management module used to support and manage the HP c-Class BladeSystem and all managed devices used in the enclosure.

Switch licensing

The Cisco MDS 9124e Fabric Switch integrates one of two license options that complement existing HP product lines. Models and their specific licenses are described next:

- Cisco MDS 9124e Fabric Switch for HP c-Class BladeSystem, base, integrating 12 active ports (8 internal and 4 external) and two preinstalled short wavelength SFPs. Software components includes Cisco Fabric Manager and Cisco Device Manager.
- Cisco MDS 9124e Port Fabric Switch for HP c-Class BladeSystem, base, integrating 24 active ports (16 internal and 8 external) and four preinstalled short wavelength SFPs. Software components includes Cisco Fabric Manager and Cisco Device Manager.

IMPORTANT:

Upgrade the Cisco MDS 9124e Fabric Switch by purchasing optional licenses. For more information, refer to the *Cisco MDS 9000 Family CLI Configuration Guide*.

PortChannel

PortChannel is included by default in the Cisco MDS 9124e Fabric Switch.

NOTE:

For more information about PortChannel, refer to the *Cisco MDS 9000 Family CLI Configuration Guide*.

Optional hardware kits

Table 4 lists optional hardware kits that support the switch. For additional options, go to the HP web site:

<http://www.hp.com>

Table 4 Optional hardware

Accessory	Part number
Short wavelength 4Gb FC SFP, 4 pack 500m	AE379A
Long wavelength 4Gb FC SFP, 4km	AE494A
Medium wavelength 4Gb FC SFP, 10km	AE380A
2 m LC-to-LC multimode FC cable	221692-B21
5 m LC-to-LC multimode FC cable	221691-B22
15 m LC-to-LC multimode FC cable	221692-B23
30 m LC-to-LC multimode FC cable	221692-B26
50 m LC-to-LC multimode FC cable	221692-B27
2 m LC-to-SC multimode FC cable	221691-B21
5 m LC-to-SC multimode FC cable	221691-B21
15 m LC-to-SC multimode FC cable	221692-B22

2 Setup

This chapter provides the following information:

- [Shipping carton contents](#)
- [Installation and safety considerations](#)
- [Installing the switch](#)
- [Setting the IP address](#)
- [Configuring the switch](#)
- [Recovering the admin password](#)

Shipping carton contents

The Cisco MDS 9124e Fabric Switch for HP c-Class BladeSystem kit shipping carton contains three items, identified in [Figure 3](#) and [Table 5](#):

- *Cisco MDS 9124e Fabric Switch for HP c-Class BladeSystem installation instructions*
- Small bag containing black, plastic SFP dust covers that must be inserted in ports where Small Form-factor pluggable (SFP) optical transceivers are not installed
- One Cisco MDS 9124e Fabric Switch with two or four SFPs installed.
 - Cisco MDS 9124e 12-Port Fabric Switch with eight internal and four external active ports and two 4Gb SFPs installed
 - Cisco MDS 9124e 24-Port Fabric Switch with sixteen internal and eight external active ports and four 4Gb SFPs installed

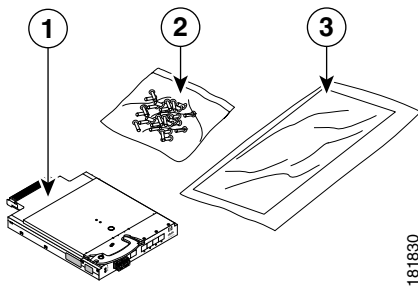


Figure 3 Carton contents

[Table 5](#) identifies the Cisco MDS 9124e Fabric Switch components.

Table 5 Cisco MDS 9124e Fabric Switch components

Item	Description
1	Cisco MDS 9124e Fabric Switch

Table 5 Cisco MDS 9124e Fabric Switch components

Item	Description
2	Dust covers for empty SFP ports
3	<i>Cisco MDS 9124e Fabric Switch for HP c-Class BladeSystem installation guide</i>

Installation and safety considerations

The Cisco MDS 9124e Fabric Switch installs in the I/O bays in the rear of the HP c-Class BladeSystem enclosure. Refer to the *HP BladeSystem c7000 Enclosure setup and installation guide* for specific enclosure requirements.

Installing multiple switches

Install and configure one Cisco MDS 9124e Fabric Switch at a time. Each switch must be assigned a unique Ethernet IP address during configuration. Once the IP address on the Cisco MDS 9124e Fabric Switch has been set, you may install additional switches in the enclosure. See the HP BladeSystem c7000 Enclosure setup and installation guide for help identifying your specific enclosure setup, available connections and power requirements.

Electrical considerations

The Cisco MDS 9124e Fabric Switch requires 55 watts, provided by the enclosure. No other power requirement or provision exists.

Environmental considerations

Ensure proper cooling and ventilation by verifying the following:

- The air vents on the enclosure are not blocked or restricted.
- The ambient air temperature at the front of the enclosure does not exceed 35°C (95°F) while the switch is operating.

 **IMPORTANT:**

The dust covers that ship with your Cisco MDS 9124e Fabric Switch must be inserted into any ports where SFPs are not installed, to help contain air flow in the BladeSystem chassis.

Installing the Switch

 **CAUTION:**

Do not install multiple switches at the same time with default addresses or an address conflict will occur. See "[Setting the IP address](#)" for more information.

The Cisco MDS 9124e Fabric Switch is a hot-pluggable device. The enclosure power may be on or off when inserting the switch. Follow these steps to install the switch:

1. Locate the appropriate interconnect bay in the rear of the enclosure per the *HP BladeSystem c7000 Enclosure setup and installation guide* provided with your enclosure.
2. Remove the slot cover, if installed.

IMPORTANT:

Populate all enclosure I/O bays with the appropriate component; for example a switch, Pass-Thru, or one of the blank panels provided with the enclosure.

CAUTION:

Properly ground yourself before handling the switch.

3. Press the handle latch to release the installation handle. See [Figure 4](#) and [Table 6](#).

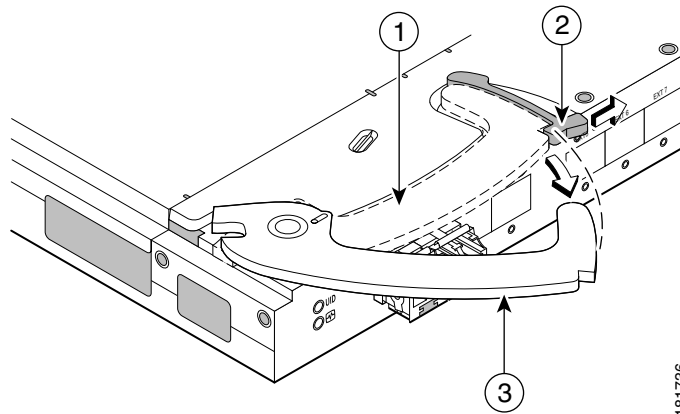


Figure 4 Releasing the installation handle

Table 6 Release mechanism components

Item	Description
1	Installation handle in latched position
2	Handle latch
3	Installation handle released

4. Align the Cisco MDS 9124e Fabric Switch with the appropriate interconnect bay according to your enclosure's specific configuration.
5. Push firmly into the interconnect bay. See [Figure 5](#).

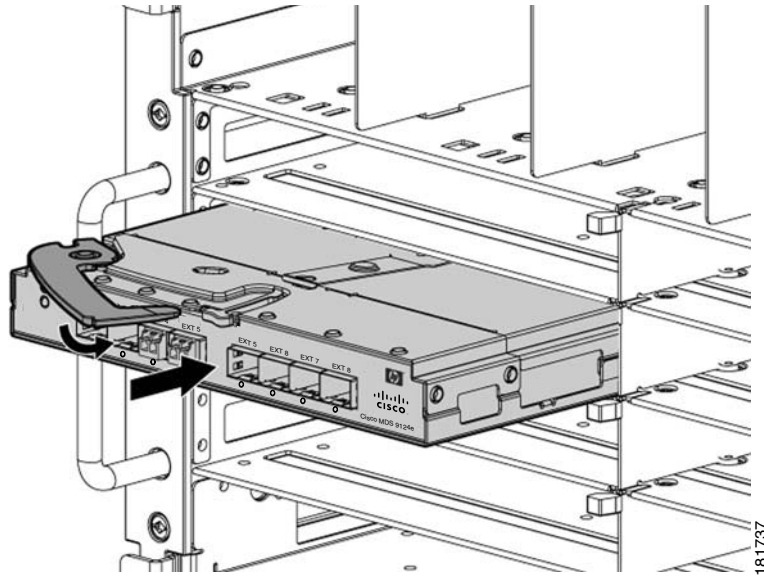


Figure 5 Installing the Cisco MDS 9124e Fabric Switch into an interconnect bay

6. Press the installation handle into the latch to lock the switch in place.

OA power verification

As defined earlier, the HP BladeSystem Onboard Administrator (OA) is the enclosure management tool that manages the devices contained within the enclosure. The OA provides a single point from which to perform basic management tasks on switches or server blades installed in the enclosure.

IMPORTANT:

HP recommends reading the *HP BladeSystem c7000 Enclosure user guide* and the *HP BladeSystem Onboard Administrator user guide*. Reading these guides in sequence will promote an overall understanding of the enclosure system.

Once the switch is installed in the interconnect bay, the OA verifies that the switch type matches the mezzanine cards present on the servers. If there is no mismatch, the OA powers up the switch. If the switch does not power up, check the enclosure and switch status via the OA web interface. Refer to the *HP BladeSystem Onboard Administrator user guide*.

Checking LEDs

See [Figure 6](#) to locate power-on LEDs.

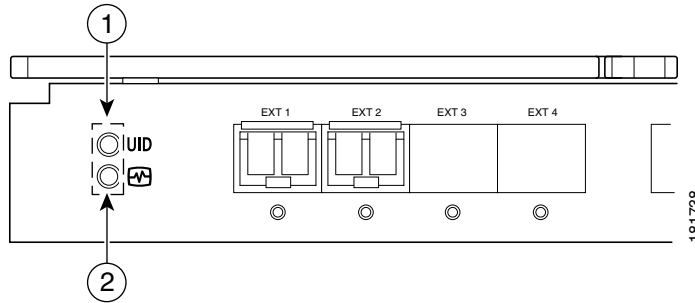


Figure 6 Verifying power-on LEDs

Verify that the LEDs match the indicators described in [Table 7](#).

Table 7 Power-on LEDs

Item	Description	Indicators
1	UID LED - used to help user locate a specific module in the BladeSystem for replacement, etc.	Off
2	Health ID LED	Steady green light

Setting the IP address

Obtain the following items to set the IP address via a serial connection:

- Computer with a terminal application (such as HyperTerminal in a Windows environment or TERM in a UNIX environment)
- Null modem serial cable

Set the IP address:

1. Verify that the enclosure is powered on.
2. Identify the active OA in the BladeSystem.
3. Connect a Null modem serial cable from your computer to the serial port of the active OA.
4. Configure the terminal application as follows:
 - In a Windows environment:
 - Baud rate—9600 bits per second
 - 8 data bits
 - None (No parity)
 - 1 stop bit
 - No flow control

- In a UNIX environment, type: `tip /dev/ttyb -9600`

5. Log into the OA.
6. Identify the interconnect bay number where the switch is installed.
7. Type the following at the command line:

```
OA> connect interconnect x
```

Where **x** is the interconnect bay number where the switch is installed.

If you are using the switch for the first time, the switch setup utility starts automatically. If this is not the first time the switch has been used, enter the setup command at the system prompt.

8. Enter a password for the system administrator. (There is no default password.)

 **NOTE:**

Be sure to use a strong password. You must explicitly configure a password that meets the requirements listed in the “Configuring User Accounts” section in the *Cisco MDS 9000 Family CLI Configuration Guide*.

-
9. Follow the instructions in the switch setup utility to configure the IP address, the netmask, and other parameters for the switch.

 **NOTE:**

Refer to the Cisco MDS 9000 Family CLI Configuration Guide for complete information about the switch setup utility.

-
10. When you have finished with the switch setup utility, logout and disconnect the serial cable.

Resetting the IP Address

Use the following steps to reset the IP address:

1. Log in to the CLI.
2. Type `config t` to enter the configuration mode.
3. Type `int mgmt 0`.
4. Type `ip address <ip><mask>`.
5. Type `exit`.
6. Type `ip default-gateway <default-gw>`.
7. Type `exit` to exit the configuration mode.

The IP address is now reset. Type `show int mgmt 0` to verify your new settings.

Configuring the Switch

The Cisco MDS 9124e Fabric Switch must be configured to ensure correct operation within a network and fabric. For instructions about configuring the switch to operate in a fabric containing switches from other vendors, refer to the *HP StorageWorks SAN Design reference guide*:

<http://h18000.www1.hp.com/products/storageworks/san/documentation.html>

For more information about the CLI, refer to the *Cisco MDS 9000 Family CLI Configuration Guide*.

Items Required for Configuration

The following items are required for configuring and connecting the Cisco MDS 9124e Fabric Switch for use in a network and fabric:

- Switch installed in the enclosure
- IP address and corresponding subnet mask and gateway address recorded in “[Setting the IP address](#)”
- Ethernet cable
- SFP transceivers and compatible optical cables, as required
- Access to an FTP server for backing up the switch configuration (optional)

Connecting to the Command Line Interface

Make an Ethernet connection and log into the switch:

1. Connect your workstation to the Ethernet network containing the OA. If the OA is not on a network, connect directly to the OA/iLO Ethernet port on the active OA.

IMPORTANT:

Verify that the switch is not being re-configured from any other connections during the remaining steps.

-
2. Open a telnet connection using the IP address set earlier.

The login prompt displays when the telnet connection locates the switch in the network.

3. Enter the user name, using the administrative account admin.
4. Enter the password.

The default password is password. If you have not changed the system passwords from the default, you are prompted to change them. Enter the new system passwords, or press **Ctrl-c** to skip the password prompts.

NOTE:

Run up to two simultaneous admin sessions and four user sessions.

-
5. Verify that the login was successful.

If successful, the prompt displays the switch name and user ID to which you are connected.

Setting the date and time

Date and time are used for logging events. Cisco MDS 9124e Fabric Switch operation does not depend on the date and time. A switch with an incorrect date and time value will function properly.

To set the date and time using the CLI:

1. If you have not already done so, connect to the switch and log in as admin.
2. Issue the time and date command using the following syntax:

```
switch# clock set <HH:MM:SS> <DD> <Month in words> <YYYY>
```

where:

- HH is the hour; valid values are 00 through 23.
- MM is minutes; valid values are 00 through 59.
- SS is seconds; valid values are 00 through 59.
- DD is the date; valid values are 01 through 31.
- YYYY is the year; valid values are 2000 through 2030.

For example:

```
switch# clock set 15:58:09 23 September 2002
```

HH represents hours in military format (15 for 3 p.m.), MM is minutes (58), SS is seconds (09), DD is the date (23), Month is the month in words (September), and YYYY is the year (2002).

For details about changing time zones, see the clock command in the *Cisco MDS 9000 Family CLI Configuration Guide*.

Verifying Installed Licenses

To determine the type of licensing included with your Cisco MDS 9124e Fabric Switch, type **show license usage** at the command prompt using the following syntax:

```
switch# show license usage
```

For more information about the Command Line Interface (CLI), refer to the *Cisco MDS 9000 Family CLI Configuration Guide*.

Modifying the FC domain ID (optional)

If desired, you can modify the domain ID. If the Cisco MDS 9124e Fabric Switch is not powered on until after it is connected to the fabric and the default FC domain ID is already in use, the domain ID for the new switch is automatically reset to a unique value. If the switch is connected to the fabric after it has been powered on and the default domain ID is already in use, the fabric segments.

Use the **show fcdomain address-allocation** command to display domain ID allocation statistics, including a list of assigned domain IDs.

To modify a preferred domain ID enter the command:

```
switch(config)# fcdomain domain 3 preferred vsan 8
```

This configures the switch in VSAN 8 to request a preferred domain ID 3 and accepts any value assigned by the principal switch. The domain range is 1 to 239.

To modify a preferred domain ID enter the command:

```
switch(config)# fcdomain domain 2 static vsan 237
```

Configures the switch in VSAN 237 to accept only a specific value and moves the local interfaces in VSAN 237 to an isolated state if the requested domain ID is not granted.

On Demand Ports

Use the **interface** command to enable On-Demand Ports. The following example shows how to use this command:

```
switch# config t  
switch(config)# interface ext1  
switch(config-if)# shut  
switch(config-if)# port-license acquire
```

Disabling and enabling a port

Use the **shutdown** and **no shutdown** commands to disable and enable ports. The following shows how to enter the **shutdown** command:

```
switch# config t  
switch(config)# interface ext1  
switch(config-if)# shutdown
```

The following shows how to enter the **no shutdown** command:

```
switch# config t  
switch(config)# interface ext1  
switch(config-if)# no shutdown
```

Verifying the configuration

Use the **show interface** and **show module** commands to verify switch configuration. The following shows how to enter the **show interface** command:

```
switch# show interface ext1
```

The following shows how to enter the **show module** command:

```
switch# show module
```

Backing up the configuration

Use the **copy running-config startup-config** command to back up switch configuration. The following shows how to enter the command:

```
switch# copy running-config startup-config
```

Recovering the Admin Password

Occasionally, you may need to recover the admin password on the Cisco MDS 9124e Switch if the user does not have another user account on the switch with network-admin privileges.

NOTE:

Recovering the admin password requires a power-cycle of the switch. Configuration changes made since the last saved configuration will be lost.

To recover the admin password on the switch:

1. Log in to the OA/iLO port through the console or telnet.
2. Connect to the appropriate Cisco MDS 9124e Switch bay.
OA> **connect interconnect x**
Where **x** is the interconnect bay number where the switch is installed.
3. Reset the Cisco MDS 9124e Switch.
4. During the bootup of the switch, issue the following command one or more times at the OA console or telnet session until you see the loader prompt:
<ctrl> c
5. Verify that you now see the loader prompt, **loader>**.
6. View the kickstart image in bootflash:
loader> dir bootflash:
For example: m9100-s2ek9-kickstart-mz.3.1.3a.bin
7. Boot the kickstart image.
loader> boot kickstart_image
For example: **boot m9100-s2ek9-kickstart-mz.3.1.3a.bin**
8. Verify that you now see the boot prompt, **switch(boot)#**.
9. Enter configuration mode:
switch(boot)# config t

10. Enter a new admin password.

```
switch(boot)(config)# admin-password <new password>
switch(boot)(config)# exit
switch(boot)#
```

11. View the system image in bootflash.

```
switch(boot)# dir bootflash:
For example: m9100-s2ek9-mz.3.1.3a.bin
```

12. Load the system image.

```
switch(boot)# load bootflash:system_image
For example: load bootflash:m9100-s2ek9-mz.3.1.3a.bin
```

13. Verify that you now see the Cisco MDS 9124e Switch login prompt, **switch login#**.

14. If necessary, reset the SNMP admin password after logging in to the switch, as in the following example:

```
switch# config t
switch(config)# snmp-server user admin auth md5 <new password>
switch(config)# exit
switch(config)# copy run start
```

Refer to the [Cisco MDS 9000 Family Fabric Manager Configuration Guide](#) and the [Cisco MDS 9000 Family CLI Configuration Guide](#) for detailed instructions.

3 Managing the Switch

This chapter provides the following information:

- Management features
- Maintaining the switch
- Replacing the switch
- Powering on and off
- Interpreting LED activity
- POST and boot specifications
- Interpreting POST results

Management features

The management tools built into the Cisco MDS 9124e Switch (listed in [Table 8](#)) can be used to monitor fabric topology, port status, physical status, and other information used for performance analysis and system debugging.

When running IP over FC, these management tools must be run on both the Fibre Channel host and the switch and must be supported by the Fibre Channel host driver. For a list of Fibre Channel hosts supported by the Cisco MDS 9124e Switch, contact your HP representative.

Table 8 Cisco MDS 9124e Switch management features

Management tool	Out-of-band support	In-band support
CLI — Run up to two admin sessions and four user sessions simultaneously. For more information, refer to the <i>Cisco MDS 9000 Family CLI Configuration Guide</i> .	Ethernet or serial connection	IP over FC
Fabric Manager— For information, refer to the <i>Cisco MDS 9000 Family Fabric Manager Configuration Guide</i> .	Ethernet connection	IP over FC
Standard SNMP applications — For information, refer to the <i>Cisco MDS 9000 Family Fabric Manager Configuration Guide</i> .	Ethernet connection	IP over FC
Management Server — For more information, refer to the <i>Cisco MDS 9000 Family Fabric Manager Configuration Guide</i> .	Ethernet connection	SMI-S compliant management program

You can connect a management station to one switch via Ethernet while managing other switches connected to the first switch via FC. To do so, set the FC gateway address of each of the other switches to be managed to the FC IP address of the first switch.

The gateway address of the first switch should be set to whatever the gateway address is for the subnet on which the first switch resides. See [Table 9](#).

Table 9 Connecting via a management station

	Management station	First switch	Second switch	Third switch
Ethernet	192.168.1.09	192.168.1.10	204.1.1.11	204.1.1.12
FCIP	192.168.65.09	192.168.65.10	192.168.65.11	192.168.65.12
Gateway	192.168.1.10	any, not self	192.168.1.10	192.168.1.10

Maintaining the Switch

The Cisco MDS 9124e Switch does not require any regular physical maintenance. However, it is critical that environmental conditions, described in "[Environmental considerations](#)" are met to help prevent switch failure due to heat stress or improper air flow.

Installing dust covers in empty ports

The dust covers included in the Cisco MDS 9124e Switch shipping carton, (see [Figure 1](#)) must be inserted in ports where SFPs are not installed. Installing dust covers ensures proper airflow and helps reduce dust contamination of the switch.

Replacing an SFP transceiver

In some cases you might need to reinstall an SFP transceiver. To remove an SFP transceiver:

1. Press and hold the cable release.
2. Remove the cable from the transceiver.
3. Pull the bail (wire handle) to release the transceiver.
4. Grasp the bail, and gently but firmly pull the transceiver out of the port.
5. Repeat this procedure for the remaining ports as required.

To install a replacement SFP:

1. Make sure that the bail is in the unlocked position.
2. Orient the SFP with the appropriate port. See [Figure 7](#) and [Table 10](#).

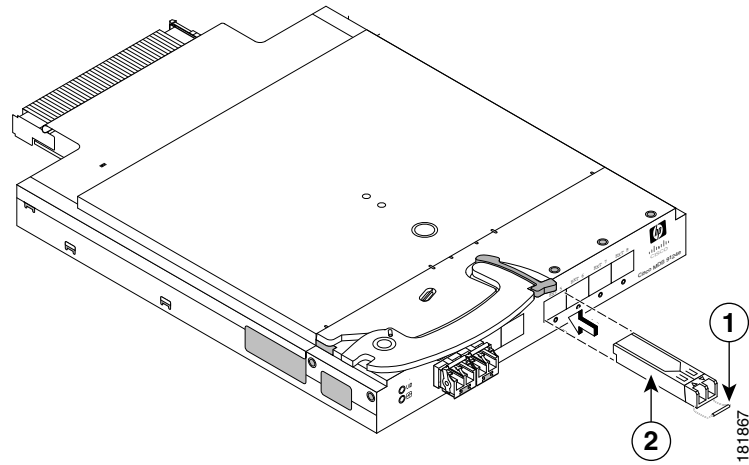


Figure 7 Installing an SFP

Table 10 SFP components

Item	Description
1	Bail
2	SFP

3. Insert the SFP into the port until you hear a click.
4. Close the bail.

Replacing the Switch

In some cases, you may need to replace a Cisco MDS 9124e Switch. To replace a Cisco MDS 9124e switch in the HP BladeSystem c-Class enclosure:

1. Create a backup of the existing configuration file. As a best practice, regularly back up the Cisco MDS 9124e Switch configuration to a remote server. Do this for each switch in the SAN whenever you change the configuration. You can back up the configuration using either the command-line interface (CLI) on the Cisco MDS 9124e Switch, Device Manager, or Fabric Manager.
2. Disconnect all external fibre channel cables from the Cisco MDS 9124e Switch.
3. Remove the Cisco MDS 9124e Switch from the c-Class enclosure.
4. Insert the new Cisco MDS 9124e Switch into the c-Class enclosure where the previous Cisco MDS 9124e Switch was removed.
5. Log in to the CLI of the c-Class Onboard Administrator.
6. Connect to the console of the Cisco MDS 9124e Switch by issuing the following command:
`OA> connect interconnect x`
 Where **x** is the interconnect bay number where the switch is installed.

7. Create an admin password when prompted by the switch.
8. Continue with the setup configuration and enter the appropriate information that matches the Cisco MDS 9124e Switch that you removed.
9. Install the same Cisco MDS SAN-OS release as was installed on the Cisco MDS 9124e Switch that was removed. Refer to the [Cisco MDS 9000 Family Fabric Manager Configuration Guide](#) and the [Cisco MDS 9000 Family CLI Configuration Guide](#) for installation instructions.
10. If Cisco MDS SAN-OS licenses were installed on the Cisco MDS 9124e Switch that was removed, install the appropriate licenses on the replacement switch.
11. If you want all ports to be shut when restoring the switch configuration, edit the last backed up switch configuration file and change all the interface ports to shutdown. For example:

```
switch# interface bay1
switch# port-license acquire
switch# no shutdown <- change to shutdown
```
12. Save the switch configuration file after making your edits.
13. Restore the switch configuration from the remote server.
14. Verify that all ports acquire a license, using the following command:

```
switch# show port-license
```
15. If all ports have not been acquired, acquire them. Refer to the [Cisco MDS 9000 Family Fabric Manager Configuration Guide](#) and the [Cisco MDS 9000 Family CLI Configuration Guide](#) for instructions.
16. Reset the SNMP admin password to enable Device Manager and Fabric Manager SNMP login. Refer to the [Cisco MDS 9000 Family Fabric Manager Configuration Guide](#) and the [Cisco MDS 9000 Family CLI Configuration Guide](#) for instructions. The following example shows the CLI commands:

```
switch# config t
switch(config)# snmp-server user admin auth md5 new password
switch(config)# do copy running-config startup-config
```
17. Connect all external fibre channel cables in the same port location as before. All interfaces should remain in the shutdown state until you re-enable them on the switch using the **no shutdown** command.
18. Verify that the switch successfully joins the fabric.

Powering on and off

Cisco MDS 9124e Switch power is provided by the enclosure. The switch will run the Power-On Self test (POST), a series of diagnostic tests run by a switch after it is powered on, by default each time power to the enclosure is turned on. The POST process can last as long as three minutes.

To remove power from the switch, remove it from the enclosure interconnect bay.

 **NOTE:** Each time the Cisco MDS 9124e Switch is powered on, its settings are restored to the startup configuration.

Interpreting LED activity

You can monitor switch activity and status by checking the switch LEDs.

There are three possible LED states: no light, a steady light, or a flashing light. The steady lights and flashing lights can be green or amber.

The LEDs flash any of these colors during boot, POST, or other diagnostic tests. This is normal and does not indicate a problem unless the LEDs do not indicate a healthy state after all boot processes and diagnostic tests are complete. A healthy state is indicated by a steady green light. See [Table 11](#) for details about LED activity.

LED indicators

All the LEDs are located on the port side. See [Figure 8](#) and [Table 11](#).

Figure 8 Identifying LEDs

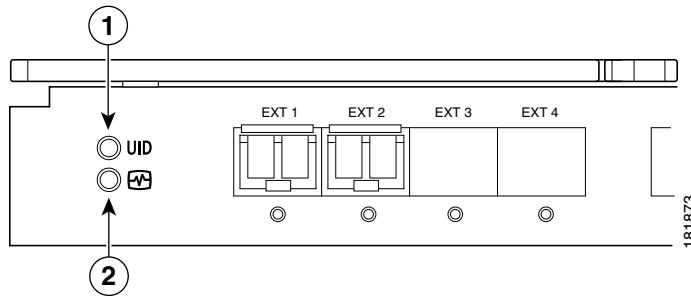


Table 11 Front panel LED indicators during normal operation

Item	Description	LED Indicators
1	Unit ID (UID) LED	Steady green light
2	Health ID LED	Steady green light

These LEDs are controlled by the OA and are used to indicate certain types of errors. The OA interface should be used to display all errors. See the *HP BladeSystem Onboard Administrator user guide* for information about the OA interface.

LED patterns

Table 12 summarizes LED color and meaning.

Table 12 Port link status LED patterns

LED color	Status of Hardware
Solid green	Link is up.
Steady flashing green	Link is up (beacon used to identify port).
Flashing green	Link is up (traffic on port).
Solid amber	Link is disabled by software.
Flashing amber	A fault condition exists.
Off	No link.

The following indicates port link speeds:

- No light — 1 Gbps
- Green — 2 Gbps
- Amber — 4 Gbps
- Shows green/amber — Invalid SFP

POST and boot specifications

POST is a system check that is performed each time the switch is powered on, rebooted, or reset. During POST, the LEDs flash different colors. Any errors that occur during POST are listed in the error log.

The Cisco MDS 9124e Switch performs POST when it is turned on or rebooted. Total boot time with POST is approximately three minutes.

POST

The success or failure results of the diagnostic tests that run during POST can be monitored through the error log or the command line interface.

POST includes the following steps:

- Preliminary POST diagnostics are run.
- Operating system is initialized.
- Hardware is initialized.
- Diagnostic tests are run on several functions, including circuitry, port functionality, memory, statistics counters, and serialization.

Boot

Boot completes in approximately three minutes if POST is run. Boot includes the following tasks after POST completes:

- Universal port configuration
- Links initialized
- The fabric is analyzed, and if any ports are connected to other switches, the switch participates in a fabric configuration
- The switch obtains a domain ID and assigns port addresses
- Unicast routing tables constructed
- Normal port operation enabled

Interpreting POST results

To determine whether POST completed successfully and whether any errors were detected:

1. Verify that the switch LEDs indicate all components are healthy. See [Table 12](#) for description and interpretation of LED patterns.
2. Verify that the switch prompt appears on the terminal of a computer workstation connected to the switch. If there is no switch prompt when POST completes, press Enter. If the switch prompt still does not appear, try opening another telnet session or another management tool. If this is not successful, the switch did not successfully complete POST. Contact HP.
3. Review the switch system log for errors. Any errors detected during POST are written to the system log, accessible through the **show logging logfile** command. For information about all referenced commands and accessing the error log, and error messages, refer to the *Cisco MDS 9000 Family System Messages Guide*.

A Regulatory compliance and safety

Regulatory compliance

Federal Communications Commission notice for Class A equipment

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense. The end user of this product should be aware that any changes or modifications made to this equipment without the approval of Hewlett-Packard could result in the product not meeting the Class A limits, in which case the FCC could void the user's authority to operate the equipment.

Declaration of conformity for products marked with the FCC logo, United States only

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For questions regarding your product, visit:

<http://www.hp.com>

For questions regarding this FCC declaration, contact us by mail or telephone:

Hewlett-Packard Company
P.O. Box 692000, Mailstop 510101
Houston, TX 77269-2000
1-281-514-3333

To identify this product, refer to the part, Regulatory Model Number, or product number found on the product.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Hewlett-Packard Company may void the user's authority to operate the equipment.

Cables

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods in order to maintain compliance with FCC Rules and Regulations.

Regulatory compliance identification numbers

For the purpose of regulatory compliance certifications and identification, your product has been assigned a unique Regulatory Model Number. The RMN can be found on the product nameplate label, along with all required approval markings and information. When requesting compliance information for this product, always refer to this RMN. The Regulatory Model Number should not be confused with the marketing name or model number of the product.

The Regulatory Model Number for the switch is:

HSTNS-1B10

Laser device

All HP systems equipped with a laser device comply with safety standards, including International Electrotechnical Commission (IEC) 825. With specific regard to the laser, the equipment complies with laser product performance standards set by government agencies as a Class 1 laser product. The product does not emit hazardous light.

Laser safety warning

⚠ WARNING!

To reduce the risk of exposure to hazardous radiation:

- Do not try to open the laser device enclosure. There are no user-serviceable components inside.
 - Do not operate controls, make adjustments, or perform procedures to the laser device other than those specified herein.
 - Allow only HP authorized service technicians to repair the laser device.
-

Certification and classification information

This product contains a laser internal to the fiber optic (FO) transceiver for connection to the Fibre Channel communications port.

In the USA, the FO transceiver is certified as a Class 1 laser product conforming to the requirements contained in the Department of Health and Human Services (DHHS) regulation 21 CFR, Subchapter J. A label on the plastic FO transceiver housing indicates the certification.

Outside the USA, the FO transceiver is certified as a Class 1 laser product conforming to the requirements contained in IEC 825–1:1993 and EN 60825–1:1994, including Amendment 11:1996 and Amendment 2:2001.

Laser product label

The optional label in Figure 10 or equivalent may be located on the surface of the HP supplied laser device.



Figure 9 Class 1 laser product label

This optional label indicates that the product is classified as a CLASS 1 LASER PRODUCT. This label may appear on the laser device installed in your product.

International notices and statements

Canadian notice (avis Canadien)

Class A equipment

This Class A Digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Union notice

Products bearing the CE Marking comply with both the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community and if this product has telecommunication functionality, the R&TTE Directive (1995/5/EC).

Compliance with these directives implies conformity to the following European Norms (the equivalent international standards and regulations are in parentheses):

- EN55022 (CISPR 22) – Electromagnetic Interference
- EN55024 (IEC61000-4-2, IEC61000-4-3, IEC61000-4-4, IEC61000-4-5, IEC61000-4-6, IEC61000-4-8, IEC61000-4-11) – Electromagnetic Immunity
- EN61000-3-2 (IEC61000-3-2) — Power Line Harmonics
- EN61000-3-3 (IEC61000-3-3) — Power Line Flicker
- EN60950 (IEC60950) — Product Safety
- Also approved under UL 60950/CSA C22.2 No. 60950–00, Safety of Information Technology Equipment.

警告使用者:

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

181952

Japanese notice

ご使用になっている装置にVCCIマークが付いていましたら、次の説明文をお読み下さい。

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをして下さい。

VCCIマークが付いていない場合には、次の点にご注意下さい。

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

181960

Korean notices

A급 기기 (업무용 정보통신기기)

이 기기는 업무용으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며, 만약 잘못판매 또는 구입하였을 때에는 가정용으로 교환하시기 바랍니다.

181956

B급 기기 (가정용 정보통신기기)

이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

181957

Safety

Battery replacement notice

Your switch is equipped with a lithium manganese dioxide, a vanadium pentoxide, or an alkaline internal battery or battery pack. There is a danger of explosion and risk of personal injury if the battery is incorrectly replaced or mistreated. Replacement is to be done by an HP authorized service provider using the HP spare part designated for this product. For more information about battery replacement or proper disposal, contact an HP authorized service provider.

⚠ WARNING!

Your switch contains an internal lithium manganese dioxide, a vanadium pentoxide, or an alkaline battery pack. There is risk of fire and burns if the battery pack is not properly handled. To reduce the risk of personal injury:

- Do not attempt to recharge the battery.
- Do not expose to temperatures higher than 60 °C.
- Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.
- Replace only with the HP spare part designated for this product.



Batteries, battery packs, and accumulators should not be disposed of together with the general household waste. To forward them to recycling or proper disposal, please use the public collection system or return them to HP, an authorized HP Partner, or their agents. For more information about battery replacement or proper disposal, contact an HP authorized reseller or service provider.

Taiwan battery recycling notice



The Taiwan EPA requires dry battery manufacturing or importing firms in accordance with Article 15 of the Waste Disposal Act to indicate the recovery marks on the batteries used in sales, giveaway, or promotion. Contact a qualified Taiwanese recycler for proper battery disposal.

Japanese power cord statement

製品には、同梱された電源コードをお使い下さい。
同梱された電源コードは、他の製品では使用出来ません。

Waste Electrical and Electronic Equipment directive

English notice

Disposal of waste equipment by users in private households in the European Union



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Dutch notice

Verwijdering van afgedankte apparatuur door privé-gebruikers in de Europese Unie



Dit symbool op het product of de verpakking geeft aan dat dit product niet mag worden gedeponereerd bij het normale huishoudelijke afval. U bent zelf verantwoordelijk voor het inleveren van uw afgedankte apparatuur bij een inzamelingspunt voor het recyclen van oude elektrische en elektronische apparatuur. Door uw oude apparatuur apart aan te bieden en te recyclen, kunnen natuurlijke bronnen worden behouden en kan het materiaal worden hergebruikt op een manier waarmee de volksgezondheid en het milieu worden beschermd. Neem contact op met uw gemeente, het afvalinzamelingsbedrijf of de winkel waar u het product hebt gekocht voor meer informatie over inzamelingspunten waar u oude apparatuur kunt aanbieden voor recycling.

Czechoslovakian notice

Likvidace zařízení soukromými domácími uživateli v Evropské unii



Tento symbol na produktu nebo balení označuje výrobek, který nesmí být vyhozen spolu s ostatním domácím odpadem. Povinností uživatele je předat takto označený odpad na předem určené sběrné místo pro recyklaci elektrických a elektronických zařízení. Okamžité třídění a recyklace odpadu pomůže uchovat přírodní prostředí a zajistí takový způsob recyklace, který ochrání zdraví a životní prostředí člověka.

Další informace o možnostech odevzdání odpadu k recyklaci získáte na příslušném obecním nebo městském úřadě, od firmy zabývající se sběrem a svozem odpadu nebo v obchodě, kde jste produkt zakoupili.

Estonian notice

Seadmete jäätmete kõrvaldamine eramajapidamistes Euroopa Liidus



See tootel või selle pakendil olev sümbol näitab, et kõnealust toodet ei tohi koos teiste majapidamisjäätmetega kõrvaldada. Teie kohus on oma seadmete jäätmed kõrvaldada, viies need elektri- ja elektroonikaseadmete jäätmete ringlussevõtmiseks selleks ettenähtud kogumispunkti. Seadmete jäätmete eraldi kogumine ja ringlussevõtmine kõrvaldamise ajal aitab kaitsta

loodusvarasid ning tagada, et ringlussevõtmine toimub viisil, mis kaitseb inimeste tervist ning keskkonda. Lisateabe saamiseks selle kohta, kuhu oma seadmete jäätmed ringlussevõtmiseks viia, võtke palun ühendust oma kohaliku linnakantselei, majapidamisjäätmete kõrvaldamise teenistuse või kauplusega, kust Te toote ostsite.

Finnish notice

Laitteiden hävittäminen kotitalouksissa Euroopan unionin alueella



Jos tuotteessa tai sen pakkauksessa on tämä merkki, tuotetta ei saa hävittää kotitalousjätteiden mukana. Tällöin hävitettävä laite on toimitettava sähkölaitteiden ja elektronisten laitteiden kierrätyspisteeseen. Hävitettävien laitteiden erillinen käsittely ja kierrätys auttavat säästämään luonnonvaroja ja varmistamaan, että laite kierrätetään tavalla, joka estää terveyshaitat ja suojelee luontoa. Lisätietoja paikoista, joihin hävitettävät laitteet voi toimittaa kierrätettäväksi, saa ottamalla yhteyttä jätehuoltoon tai liikkeeseen, josta tuote on ostettu.

Élimination des appareils mis au rebut par les ménages dans l'Union européenne



Le symbole apposé sur ce produit ou sur son emballage indique que ce produit ne doit pas être jeté avec les déchets ménagers ordinaires. Il est de votre responsabilité de mettre au rebut vos appareils en les déposant dans les centres de collecte publique désignés pour le recyclage des équipements électriques et électroniques. La collecte et le recyclage de vos appareils mis au rebut indépendamment du reste des déchets contribue à la préservation des ressources naturelles et garantit que ces appareils seront recyclés dans le respect de la santé humaine et de l'environnement. Pour obtenir plus d'informations sur les centres de collecte et de recyclage des appareils mis au rebut, veuillez contacter les autorités locales de votre région, les services de collecte des ordures ménagères ou le magasin dans lequel vous avez acheté ce produit.

Entsorgung von Altgeräten aus privaten Haushalten in der EU



Das Symbol auf dem Produkt oder seiner Verpackung weist darauf hin, dass das Produkt nicht über den normalen Hausmüll entsorgt werden darf. Benutzer sind verpflichtet, die Altgeräte an einer Rücknahmestelle für Elektro- und Elektronik-Altgeräte abzugeben. Die getrennte Sammlung und ordnungsgemäße Entsorgung Ihrer Altgeräte trägt zur Erhaltung der natürlichen Ressourcen bei und garantiert eine Wiederverwertung, die die Gesundheit des Menschen und die Umwelt schützt. Informationen dazu, wo Sie Rücknahmestellen für Ihre Altgeräte finden, erhalten Sie bei Ihrer Stadtverwaltung, den örtlichen Müllentsorgungsbetrieben oder im Geschäft, in dem Sie das Gerät erworben haben.

Greek notice

Απόρριψη άχρηστου εξοπλισμού από χρήστες σε ιδιωτικά νοικοκυριά στην Ευρωπαϊκή Ένωση



Το σύμβολο αυτό στο προϊόν ή τη συσκευασία του υποδεικνύει ότι το συγκεκριμένο προϊόν δεν πρέπει να διατίθεται μαζί με τα άλλα οικιακά σας απορρίμματα. Αντίθετα, είναι δική σας ευθύνη να απορρίψετε τον άχρηστο εξοπλισμό σας παραδίδοντάς τον σε καθορισμένο σημείο συλλογής για την ανακύκλωση άχρηστου ηλεκτρικού και ηλεκτρονικού εξοπλισμού.

Η ξεχωριστή συλλογή και ανακύκλωση του άχρηστου εξοπλισμού σας κατά την απόρριψη θα συμβάλει στη διατήρηση των φυσικών πόρων και θα διασφαλίσει ότι η ανακύκλωση γίνεται με τρόπο που προστατεύει την ανθρώπινη υγεία και το περιβάλλον. Για περισσότερες πληροφορίες σχετικά με το πού μπορείτε να παραδώσετε τον άχρηστο εξοπλισμό σας για ανακύκλωση, επικοινωνήστε με το αρμόδιο τοπικό γραφείο, την τοπική υπηρεσία διάθεσης οικιακών απορριμμάτων ή το κατάστημα όπου αγοράσατε το προϊόν.

Hungarian notice

Készülékek magánháztartásban történő selejtezése az Európai Unió területén



A készüléken, illetve a készülék csomagolásán látható azonos szimbólum annak jelzésére szolgál, hogy a készülék a selejtezés során az egyéb háztartási hulladéktól eltérő módon kezelendő. A vásárló a hulladékká vált készüléket köteles a kijelölt gyűjtőhelyre szállítani az elektromos és elektronikai készülékek újrahasznosítása céljából. A hulladékká vált készülékek selejtezési begyűjtése

és újrahasznosítása hozzájárul a természeti erőforrások megőrzéséhez, valamint biztosítja a selejtezett termékek környezetre és emberi egészségre nézve biztonságos feldolgozását.

A begyűjtés pontos helyéről bővebb tájékoztatást a lakhelye szerint illetékes önkormányzattól, az illetékes személtakarító vállalatától, illetve a terméket elárusító helyen kaphat.

Italian notice

Smaltimento delle apparecchiature da parte di privati nel territorio dell'Unione Europea



Questo simbolo presente sul prodotto o sulla sua confezione indica che il prodotto non può essere smaltito insieme ai rifiuti domestici. È responsabilità dell'utente smaltire le apparecchiature consegnandole presso un punto di raccolta designato al riciclo e allo smaltimento di apparecchiature elettriche ed elettroniche. La raccolta differenziata e il corretto riciclo delle apparecchiature da smaltire permette di proteggere la salute degli individui e l'ecosistema. Per ulteriori informazioni relative ai punti di raccolta delle apparecchiature, contattare l'ente locale per lo smaltimento dei rifiuti, oppure il negozio presso il quale è stato acquistato il prodotto.

Latvian notice

Nolietotu iekārtu iznīcināšanas noteikumi lietotājiem Eiropas Savienības privātajās mājāsniecībās



Šāds simbols uz izstrādājuma vai uz tā iesaiņojuma norāda, ka šo izstrādājumu nedrīkst izmest kopā ar citiem sadzīves atkritumiem. Jūs atbildat par to, lai nolietotās iekārtas tiktu nodotas speciāli iekārtotos punktos, kas paredzēti izmantoto elektrisko un elektronisko iekārtu savākšanai otrreizējai pārstrādei. Atsevišķa nolietoto iekārtu savākšana un otrreizējā pārstrāde palīdzēs saglabāt dabas resursus un garantēs, ka šīs iekārtas tiks otrreizēji pārstrādātas tādā veidā, lai pasargātu vidi un cilvēku veselību. Lai uzzinātu, kur nolietotās iekārtas var izmest otrreizējai pārstrādei, jāvērsas savas dzīves vietas pašvaldībā, sadzīves atkritumu savākšanas dienestā vai veikalā, kurā izstrādājums tika nopirkts.

Lithuanian notice

Vartotojų iš privačių namų ūkių į rangos atliekų šalinimas Europos Sąjungoje



Šis simbolis ant gaminio arba jo pakuotės rodo, kad šio gaminio šalinti kartu su kitomis namų ūkio atliekomis negalima. Šalintinas į rangos atliekas privalote pristatyti į specialią surinkimo vietą elektros ir elektroninės įrangos atliekoms perdirbti. Atskirai surenkamos ir perdirbamos šalintinos įrangos atliekos padės saugoti gamtinius išteklius ir užtikrinti, kad jos bus perdirbtos tokiu būdu, kuris nekenkia žmonių sveikatai ir aplinkai. Jeigu norite sužinoti daugiau apie tai, kur galima pristatyti perdirbtinas įrangos atliekas, kreipkitės į savo seniūniją, namų ūkio atliekų šalinimo tarnybą arba parduotuvę, kurioje įsigijote gaminį.

Polish notice

Pozbywanie się zużytego sprzętu przez użytkowników w prywatnych gospodarstwach domowych w Unii Europejskiej



Ten symbol na produkcie lub jego opakowaniu oznacza, że produktu nie wolno wyrzucać do zwykłych pojemników na śmieci. Obowiązkiem użytkownika jest przekazanie zużytego sprzętu do wyznaczonego punktu zbiórki w celu recyklingu odpadów powstających ze sprzętu elektrycznego i elektronicznego. Osobna zbiórka oraz recykling zużytego sprzętu pomogą w ochronie zasobów naturalnych i zapewnią ponowne wprowadzenie go do obiegu w sposób chroniący zdrowie człowieka i środowisko. Aby uzyskać więcej informacji o tym, gdzie można przekazać zużyty sprzęt do recyklingu, należy się skontaktować z urzędem miasta, zakładem gospodarki odpadami lub sklepem, w którym zakupiono produkt.

Portuguese notice

Descarte de Lixo Elétrico na Comunidade Européia



Este símbolo encontrado no produto ou na embalagem indica que o produto não deve ser descartado no lixo doméstico comum. É responsabilidade do cliente descartar o material usado (lixo elétrico), encaminhando-o para um ponto de coleta para reciclagem. A coleta e a reciclagem seletivas desse tipo de lixo ajudarão a conservar as reservas naturais; sendo assim, a reciclagem será feita de uma forma segura, protegendo o ambiente e a saúde das pessoas. Para obter mais informações sobre locais que reciclam esse tipo de material, entre em contato com o escritório da HP em sua cidade, com o serviço de coleta de lixo ou com a loja em que o produto foi adquirido.

Slovakian notice

Likvidácia vyradených zariadení v domácnostiach v Európskej únii



Symbol na výrobku alebo jeho balení označuje, že daný výrobok sa nesmie likvidovať s domovým odpadom. Povinnosťou spotrebiteľa je odovzdať vyradené zariadenie v zbernom mieste, ktoré je určené na recykláciu vyradených elektrických a elektronických zariadení. Separovaný zber a recyklácia vyradených zariadení prispieva k ochrane prírodných zdrojov a zabezpečuje, že recyklácia sa vykonáva spôsobom chrániacim ľudské zdravie a životné prostredie. Informácie o zberných miestach na recykláciu vyradených zariadení vám poskytne miestne zastupiteľstvo, spoločnosť zabezpečujúca odvoz domového odpadu alebo obchod, v ktorom ste si výrobok zakúpili.

Slovenian notice

Odstranjevanje odslužene opreme uporabnikov v zasebnih gospodinjstvih v Evropski uniji



Ta znak na izdelku ali njegovi embalaži pomeni, da izdelka ne smete odvreči med gospodinjske odpadke. Nasprotno, odsluženo opremo morate predati na zbirališče, pooblaščen za recikliranje odslužene električne in elektronske opreme. Ločeno zbiranje in recikliranje odslužene opreme prispeva k ohranjanju naravnih virov in zagotavlja recikliranje te opreme na zdravju in okolju neškodljiv način. Za podrobnejše informacije o tem, kam lahko odpeljete odsluženo opremo na recikliranje, se obrnite na pristojni organ, komunalno službo ali trgovino, kjer ste izdelek kupili.

Spanish notice

Eliminación de residuos de equipos eléctricos y electrónicos por parte de usuarios particulares en la Unión Europea



Este símbolo en el producto o en su envase indica que no debe eliminarse junto con los desperdicios generales de la casa. Es responsabilidad del usuario eliminar los residuos de este tipo depositándolos en un "punto limpio" para el reciclado de residuos eléctricos y electrónicos. La recogida y el reciclado selectivos de los residuos de aparatos eléctricos en el momento de su eliminación contribuirá a conservar los recursos naturales y a garantizar el reciclado de estos residuos de forma que se proteja el medio ambiente y la salud. Para obtener más información sobre los puntos de recogida de residuos eléctricos y electrónicos para reciclado, póngase en contacto con su ayuntamiento, con el servicio de eliminación de residuos domésticos o con el establecimiento en el que adquirió el producto.

Bortskaffande av avfallsprodukter från användare i privathushåll inom Europeiska Unionen



Om den här symbolen visas på produkten eller förpackningen betyder det att produkten inte får slängas på samma ställe som hushållssopor. I stället är det ditt ansvar att bortskaffa avfallet genom att överlämna det till ett uppsamlingsställe avsett för återvinning av avfall från elektriska och elektroniska produkter. Separat insamling och återvinning av avfallet hjälper till att spara på våra naturresurser och gör att avfallet återvinns på ett sätt som skyddar människors hälsa och miljön.

Kontakta ditt lokala kommunkontor, din närmsta återvinningsstation för hushållsavfall eller affären där du köpte produkten för att få mer information om var du kan lämna ditt avfall för återvinning.

B Electrostatic discharge

This appendix provides the following information:

- [How to prevent electrostatic discharge](#)
- [Grounding methods](#)

How to prevent electrostatic discharge

To prevent damage to the system, you must follow certain precautions when setting up the system or handling parts. A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the device.

To prevent electrostatic damage, observe the following precautions:

- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always make sure you are properly grounded when touching a static-sensitive component or assembly.

Grounding methods

There are several methods for grounding. Use one or more of the following methods when handling or installing electrostatic-sensitive parts:

- Use a wrist strap connected by a ground cord to a grounded workstation or chassis. Wrist straps are flexible straps with a minimum of 1 megohm \pm 10 percent resistance in the ground cords. To provide proper ground, wear the strap snug against the skin.
- Use heel straps, toe straps, or boot straps at standing workstations. Wear the straps on both feet when standing on conductive floors or static-dissipating floor mats.
- Use conductive field service tools.
- Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, have an HP authorized reseller install the part.



NOTE:

For more information on static electricity, or for assistance with product installation, contact your HP authorized reseller.

C Switch technical specifications

This appendix provides the following information:

- General specifications
- Weight and physical dimensions
- Environmental requirements
- Supported HBAs
- Supported SFPs

General specifications

Table 13 lists general specifications for the Cisco MDS 9124e Switch.

Table 13 General specifications

Specification	Description
Configurable port types	F_Port, FL_Port, and E_Port
Media types	Small Form-Factor Pluggable (SFP) laser. 1/2/4Gb short wave up to 500 m (1,640 ft.) and 1/2/4Gb long wave up to 10 km
EMC emissions	An operating SAN Switch conforms to the emissions requirements specified by the following regulations: <ul style="list-style-type: none">• FCC Rules & Regulations, Part 15 subpart B, Class A• CSA C108.8 Class A• VCCI Class A ITE• CISPR 22 Class A• EN55022 Class A• AS/NZF 3548: 1995 Class A• CNS13438 Class A• ICES-003 Class A• Korean EMC Requirements• BSMI Standard CNS 13438• EMC Directive 89/336/EEC• EN5022 Level A• EN50082-2/EN55024: 1998

Specification	Description
EMC immunity	<ul style="list-style-type: none"> • IEC 61000-4-2 Severity Level 3 for Electrostatic Discharge • IEC 61000-4-3 Severity Level 3 for Radiated Fields • IEC 61000-4-4 Severity Level 3 for Fast Transients • IEC 61000-4-5 Severity Level 3 for Surge Voltage • IEC 61000-4-6 Conducted Emissions • IEC 61000-4-11 Voltage Variations • EN 61000-4-12 Oscillatory Waves Immunity • EN 61000-3-2 Limits for Harmonic Current Emissions • EN 61000-3-3 JEIDA
System architecture	Nonblocking shared-memory switch
ANSI protocol	FC-PH (FC Physical and Signalling Interface standard)
Modes of operation	FC Class 2, Class 3, and Class F
Maximum frame size	2112-byte
Port-to-port latency	1.2 μ sec. with no contention, cut-through routing at 4Gb. Latency increases as input port speed increases and becomes disparate from output port speed.

Weight and physical dimensions

Table 14 lists physical properties.

Table 14 Switch physical dimensions

Dimension	Measurement
Height	29.3 mm (1.15 in)
Width	208 mm (8.19 in)
Depth	280 mm (11.02 in)
Weight	1.27 kg (2.8 lb)

Environmental requirements

To ensure proper operation, the switch must not be subjected to environmental conditions beyond those for which it was tested. The ranges specified in Table 16 list the acceptable environment for both operating and non-operating conditions.

Table 15 Environmental requirements

Condition	Acceptable range during operation	Acceptable range during non-operation
Ambient temperature	104°F/40 °C at sea level, derated 1 C per 1000 ft above sea level	-40°C to 70°C with maximum rate of change of 20 C /hr
Humidity	5% to 90% relative humidity, non-condensing	50% to 80% relative humidity, non-condensing
Altitude	0 to 10,000 ft (3 km) above sea level	0 to 40,000 ft (12 km) above sea level
Shock	40 G, 2mS duration	140 G, 2mS duration
Vibration	0.5 G, 10 to 500 Hz	2.0 G, 5 to 500 Hz
Airflow	47 cubic ft per minute	None required

Supported SFPs

Do not use unsupported SFPs; they can affect switch operability. They may not fit correctly and may void your warranty. See Optional hardware kits for a list of supported SFPs.

For a complete list of supported devices, refer to the latest version of the HP StorageWorks SAN design reference guide:

<http://h18000.www1.hp.com/products/storageworks/san/documentation.html>

Supported HBAs

For a list of HBAs that have been tested and are known to work with the SAN switches, refer to the latest version of the HP StorageWorks SAN design reference guide:

<http://h18000.www1.hp.com/products/storageworks/san/documentation.htm>

Glossary

This glossary defines terms used in this guide or related to this product. It is not a comprehensive glossary of computer terms.

AL_PA	Arbitrated loop physical address. A unique 8-bit value assigned during loop initialization to a port in an arbitrated loop. See also non-participating mode .
alias server	A fabric software facility that supports multicast group management.
API	Application programming interface. A defined protocol that allows applications to interface with a set of services.
arbitrated loop	A shared 100 Mb/s Fibre Channel transport structured as a loop. Can support up to 126 devices and one fabric attachment. See also public device , public loop .
AW_TOV	Arbitration wait time-out value. The minimum time an arbitrating L_Port waits for a response before beginning loop initialization.
backup FCS switch	Backup fabric configuration server switch. The switch or switches assigned as backup in case the primary FCS switch fails.
bandwidth	The total transmission capacity of a cable, link, or system. Usually measured in bits per second (b/s). May also refer to the range of transmission frequencies available to a link or system.
broadcast	The transmission of data from a single source to all devices in the fabric, regardless of zoning.
buffer-to-buffer flow control	Management of the frame transmission rate in either a point-to-point topology or an arbitrated loop. See also arbitrated loop , point-to-point , topology .
CLI	Command line interface. Interface that depends entirely on the use of commands, such as through telnet or SNMP, and does not involve a GUI.
compact flash	Flash (temporary) memory that is used in a manner similar to hard disk storage. It is connected to a bridging component that connects to the PCI bus of the processor. Not visible within the processor's memory space.
configuration	The way a system is set up. May refer to hardware or software: <ul style="list-style-type: none">• Hardware: The number, type, and arrangement of components that make up a system or network.• Software: The set of parameters that guide switch operation. May include general system parameters, IP address information, domain ID, and other information. Modifiable by any login with administrative privileges. May also refer to a set of zones.
CRC	Cyclic redundancy check. A check for transmission errors that is included in every data frame.
data word	A type of transmission word that occurs within frames. The frame header, data field, and CRC all consist of data words.

defined zone configuration	The set of all zone objects defined in the fabric. May include multiple zone configurations. See also zone , zone configuration .
directory service	See SNS.
DLS	Dynamic load sharing. Dynamic distribution of traffic over available paths. Allows for recomputing of routes when an Fx_Port or E_Port changes status.
domain ID	Unique identifier used in routing frames for all switches in a fabric. Usually assigned by the principal switch, but can be assigned manually. The domain ID for an HP switch can be any integer between 1 and 239. The default domain ID is usually 1.
E_D_TOV	Error-detect time-out value. The minimum time a target waits for a sequence to complete before initiating recovery. Can also be defined as the maximum time allowed for a round-trip transmission before an error condition is declared.
E_Port	Expansion port. A type of switch port that can be connected to an E_Port on another switch to create an ISL. See also U_Port .
EE_Credit	End-to-end credit. The number of receive buffers allocated by a recipient port to an originating port. Used by Class 1 and Class 2 services to manage the exchange of frames across the fabric between source and destination.
EIA rack	A equipment storage rack that meets the standards set by the EIA (Electronics Industry Association).
enabled zone configuration	The currently enabled configuration of zones. Only one configuration can be enabled at a time. See also zone,zone configuration .
end-to-end flow control	A facility that governs flow of class 1 and class 2 frames between N_Ports.
error	With respect to FC, a missing or corrupted frame, time-out, loss of synchronization, or loss of signal (link error).
exchange	The highest-level FC mechanism used for communication between N_Ports. Composed of one or more related sequences; can work in one or both directions.
F_Port	Fabric port. A port that is able to transmit under fabric protocol and interface over links. Can be used to connect an N_Port to a switch. See also U_Port .
fabric	An FC network containing two or more switches in addition to hosts and devices. May also be called a switched fabric.
fabric name	The unique identifier assigned to a fabric and communicated during login and port discovery.
FCIA	Fibre Channel Industry Association. An international organization of FC industry professionals. Among other things, provides oversight of ANSI and industry standards.
FCP	Fibre Channel Protocol. Mapping of protocols onto the FC standard protocols. For example, SCSI FCP maps SCSI-3 onto FC.
FCS switch	Fabric Configuration Server switch. One or more designated HP switches that store and manage the configuration and security parameters for all switches in the fabric.

Fibre Channel	The primary protocol for building SANs to transmit data between servers, switches, and storage devices. Unlike IP and Ethernet, Fibre Channel is designed to support the needs of storage devices of all types. It is a high-speed, serial, bidirectional, topology-independent protocol, and is a highly scalable interconnection between computers, peripherals, and networks.
fill word	An IDLE or ARB ordered set that is transmitted during breaks between data frames to keep the link active.
FLOGI	The process by which an N_Port determines whether a fabric is present and, if so, exchanges service parameters with it. See also PLOGI .
FL_Port	Fabric loop port. A port that is able to transmit under fabric protocol and has arbitrated loop capabilities. Can also be used to connect an NL_Port to a switch. See also U_Port .
frame	The Fibre Channel structure used to transmit data between ports. Consists of a start-of-frame delimiter, header, optional headers, data payload, cyclic redundancy check, and end-of-frame delimiter. There are two types of frames: link control frames and data frames. See also packet .
FRU	Field-replaceable unit. A component that can be replaced on site.
FS	Fibre Channel Service. A service that is defined by FC standards and exists at a well-known address. The Simple Name Server, for example, is an FC service.
FSP	Fibre Channel Service Protocol. The common protocol for all fabric services; it is transparent to the fabric type or topology.
FSPF	Fabric shortest path first. HP routing protocol for FC switches.
Fx_Port	A fabric port that can operate as an F_Port or FL_Port.
G_Port	Generic port. A port that can operate as an E_Port or F_Port. A port is defined as a G_Port when it is not yet connected or has not yet assumed a specific function in the fabric. See also E_Port , F_Port , U_Port .
hard address	The AL_PA that an NL_Port attempts to acquire during loop initialization. See also defined zone configuration.
idle	Continuous transmission of an ordered set over an FC link when no data is being transmitted, to keep the link active and maintain bit, byte, and word synchronization.
integrated fabric	The fabric created by connecting multiple HP switches with multiple ISL cables, and configuring the switches to handle traffic as a seamless group.
ISL trunking	The distribution of traffic over the combined bandwidth of multiple ISLs. A set of trunked ISLs is called a trunking group; the ports in a trunking group are called trunking ports.
isolated E_Port	An E_Port that is online but not operational due to overlapping domain IDs or nonidentical parameters (such as E_D_TOVs). See also E_D_TOV .
K28.5	A special 10-bit character that indicates the beginning of a transmission word that performs FC control and signaling functions. The first seven bits are the common pattern.
kernel flash	Flash (temporary) memory connected to the peripheral bus of the processor and visible within the processor's memory space. Also called user flash.

L_Port	<p>Loop port. A node port (NL_Port) or fabric port (FL_Port) that has arbitrated loop capabilities. An L_Port can be in one of two modes:</p> <ul style="list-style-type: none"> • Fabric mode: Connected to a port that is not loop capable and is using fabric protocol. • Loop mode: In an arbitrated loop and using loop protocol. An L_Port in loop mode can also be in participating mode or non-participating mode. See also non-participating mode.
latency	The time required to transmit a frame from the time it is sent until it arrives. Together, latency and bandwidth define the speed and capacity of a link or system.
link	With respect to FC, a physical connection between two ports, consisting of both transmit and receive fibers.
link services	A protocol for link-related actions.
LIP	Loop initialization primitive. The signal that begins initialization in a loop. It indicates either loop failure or the resetting of a node.
LM_TOV	Loop master time-out value. The minimum time that the loop master waits for a loop initialization sequence to return.
loop failure	Loss of signal within a loop for any period of time; loss of synchronization for longer than the time-out value.
Loop_ID	A hexadecimal value representing one of the 127 possible AL_PA values in an arbitrated loop. See also AL_PA .
loop initialization	The logical procedure used by an L_Port to discover its environment. Can be used to assign AL_PA addresses, detect loop failure, or reset a node. See also AL_PA .
LPSM	Loop port state machine. The logical entity that performs arbitrated loop protocols and defines the behavior of L_Ports when they require access to an arbitrated loop. See also L_Port .
LWL	Long wavelength. A type of fiber optic cabling that is based on 1300 nm lasers and supports link speeds up to 2 Gb/s. May also refer to the type of transceiver. See also SWL .
master port	The port that determines the routing paths for all traffic flowing through a trunking group. One of the ports in the first ISL in the trunking group is designated as the master port for that group. See also ISL trunking.
MIB	Management Information Base. An SNMP structure to help with device management, providing configuration and device information. See also SNMP .
multicast	The transmission of data from a single source to multiple specified N_Ports (as opposed to all ports on the network).
N_Port	Node port. A port on a node that can connect to an FC port or to another N_Port in a point-to-point connection.
name server	A term frequently used to indicate a Simple Name Server (SNS). See also SNS .
NL_Port	Node loop port. A node port that has arbitrated loop capabilities. Used to connect an equipment port to the fabric in a loop configuration through an FL_Port. See also node .

node	An FC device that contains an N_Port or NL_Port.
non-participating mode	A mode in which an L_Port in a loop is inactive and cannot arbitrate or send frames, but can retransmit any received transmissions. This mode is entered if there are more than 127 devices in a loop and an AL_PA cannot be acquired. See also L_Port , AL_PA .
Nx_Port	A node port that can operate as an N_Port or NL_Port.
Onboard Administrator (OA)	The HP BladeSystem Onboard Administrator (OA) is the enclosure management processor, subsystem, and firmware base used to support the HP BladeSystem c7000 and all the managed devices contained within the enclosure.
packet	A set of information transmitted across a network.
participating mode	A mode in which an L_Port in a loop has a valid AL_PA and can arbitrate, send frames, and retransmit received transmissions.
path selection	The selection of a transmission path through the fabric. HP switches use the FSPF protocol for transmission path selection.
phantom address	An AL_PA value assigned to a device that is not physically in the loop. Also known as phantom AL_PA. See also AL_PA , phantom device .
phantom device	A device that is not physically in an arbitrated loop but is logically included through the use of a phantom address. See also phantom address .
PLOGI	Port login. The port-to-port login process by which initiators establish sessions with targets. See also FLOGI .
point-to-point	An FC topology that employs direct links between each pair of communicating entities. See also buffer-to-buffer flow control.
port cage	The metal casing extending out of the FC port on the switch and into which a GBIC or SFP transceiver can be inserted.
Port_Name	The unique identifier assigned to an FC port. It is communicated during login and port discovery.
POST	Power-on self-test. A series of diagnostic tests run by a switch after it is powered on.
primary FCS switch	Primary Fabric Configuration Server switch. The switch that actively manages the configuration and security parameters for all switches in the fabric.
private loop	An arbitrated loop that does not include a participating FL_Port.
private NL_Port	An NL_Port that communicates only with other private NL_Ports in the same loop and does not log in to the fabric.
public device	A device that supports arbitrated loop protocol, can interpret 8-bit addresses, and can log in to the fabric. See also arbitrated loop .
public loop	An arbitrated loop that includes a participating FL_Port and may contain both public and private NL_Ports. See also arbitrated loop .
public NL_Port	An NL_Port that logs in to the fabric, can function within a public or private loop, and can communicate with private or public NL_Ports. See also private loop .
quad	A group of four adjacent ports that share a common pool of frame buffers.

R_A_TOV	Resource allocation time-out value. The maximum time a frame can be delayed in the fabric and still be delivered.
RAID	Redundant Array of Independent Disks. A collection of disk drives that appear as a single volume to the server and are fault tolerant through mirroring or parity checking.
request rate	The rate at which requests arrive at a servicing entity.
route	With respect to a fabric, the communication path between two switches. May also apply to the specific path taken by an individual frame from source to destination.
routing	The assignment of frames to specific switch ports according to frame destination.
RR_TOV	Resource recovery time-out value. The minimum time a target device in a loop waits after a LIP before logging out a SCSI initiator.
RSCN	Registered state change notification. A switch function that allows notification of fabric changes to be sent from the switch to the specified nodes.
SAN	Storage area network. A network of systems and storage devices that communicate using FC protocols.
SDRAM	Synchronous dynamic random access memory. The main memory for a switch. See also switch .
sequence	A group of related frames transmitted in the same direction between two N_ports.
service rate	The rate at which an entity can service requests.
single mode	The fiber optic cabling standard that corresponds to distances up to 10 km between devices.
SNMP	Simple Network Management Protocol. An Internet management protocol that uses either IP for network-level functions and UDP for transport functions, or TCP/IP for both. SNMP can be made available over other protocols (such as UDP/IP) because it does not rely on the underlying communication protocols. See also MIB , trap (SNMP) .
SNS	Simple Name Server. A switch service that stores names, addresses, and attributes for up to 15 minutes, and provides them as required to other devices in the fabric. May also be referred to as a directory service.
switch	Hardware that routes frames according to FC protocol and is controlled by software.
switch port	A port on a switch. Switch ports can be E_Ports, F_Ports, or FL_Ports.
SWL	Short wavelength. A type of fiber optic cabling that is based on 850 nm lasers and supports link speeds up to 2 Gb/s. May also refer to the type of transceiver.
tenancy	The time span that begins when a port wins arbitration in a loop and ends when the same port returns to the monitoring state. Also called loop tenancy.
throughput	The rate of data flow achieved within a cable, link, or system. Usually measured in bits per second (b/s).

topology	With respect to FC, the configuration of the FC network and the resulting communication paths allowed. There are three possible topologies: <ul style="list-style-type: none"> • Point-to-point: A direct link between two communication ports • Switched fabric: Multiple N_Ports linked to a switch by F_Ports • Arbitrated loop: Multiple NL_Ports connected in a loop
transmission character	A 10-bit character encoded according to the rules of the 8b/10b algorithm.
transmission word	A group of transmission characters.
trap (SNMP)	The message sent by an SNMP agent to inform the SNMP management station of a critical error. See also SNMP .
U_Port	Universal port. A switch port that can operate as a G_Port, E_Port, F_Port, or FL_Port. A port is defined as a U_Port when it is not connected or has not yet assumed a specific function in the fabric. See also E_Port,F_Port , G_Port .
well-known address	With respect to FC, a logical address defined by the FC standards as assigned to a specific function and stored on the switch.
workstation	A computer used to access and manage the fabric. May also be called a management station or host.
WWN	World wide name. An identifier that is unique worldwide. Each entity in a fabric has a distinct WWN.
zone	A set of devices and hosts attached to the same fabric and configured as being in the same zone. Devices and hosts within the same zone have access permission to others in the zone, but are not visible to any outside the zone. See also defined zone configuration , enabled zone configuration .
zone configuration	A specified set of zones. Enabling a configuration enables all zones in that configuration. See also defined zone configuration , enabled zone configuration .

Index

A

admin password
 recovery 26
audience 7

B

boot specifications 35

C

command line interface 23
conventions
 document 8
 text symbols 8

D

document
 conventions 8

E

EIA 58
environmental requirements 55
Ethernet connection 29

G

grounding methods 51

H

hardware kits 15
HBAs, supported 55
HP
 additional web sites 9
 Subscribers Choice web site 9
 switch related documentation 7
 technical support 7

I

IP address 21

L

LED

 indicators 33
licenses
 base 14
 full 14
 verifying 24
long wavelength 11

M

management
 Fabric Manager 29
managerment
 CLI 29

P

password recovery 26
port channel 14
ports
 external 11
 internal 11, 13
 switch, port side 13
 types 11
POST specifications 34
powering off and on 32

S

SFPs
 replacing 30
 supported 15
SFPs, supported 55
shipping carton contents 17
SNMP 29
specifications
 environmental 55
 supported HBAs 55
 supported SFPs 55
switch
 components 12
 configuring 23
 enabling and disabling ports 25
 features 11
 installing 18

- maintenance 30
- management 29
- replacement 31
- setting the date and time 24
- setting the IP address 21
- symbols in text 8

T

- text symbols 8

